

SHOULDER ARMOR

©copyright www.dieselpunk.ro

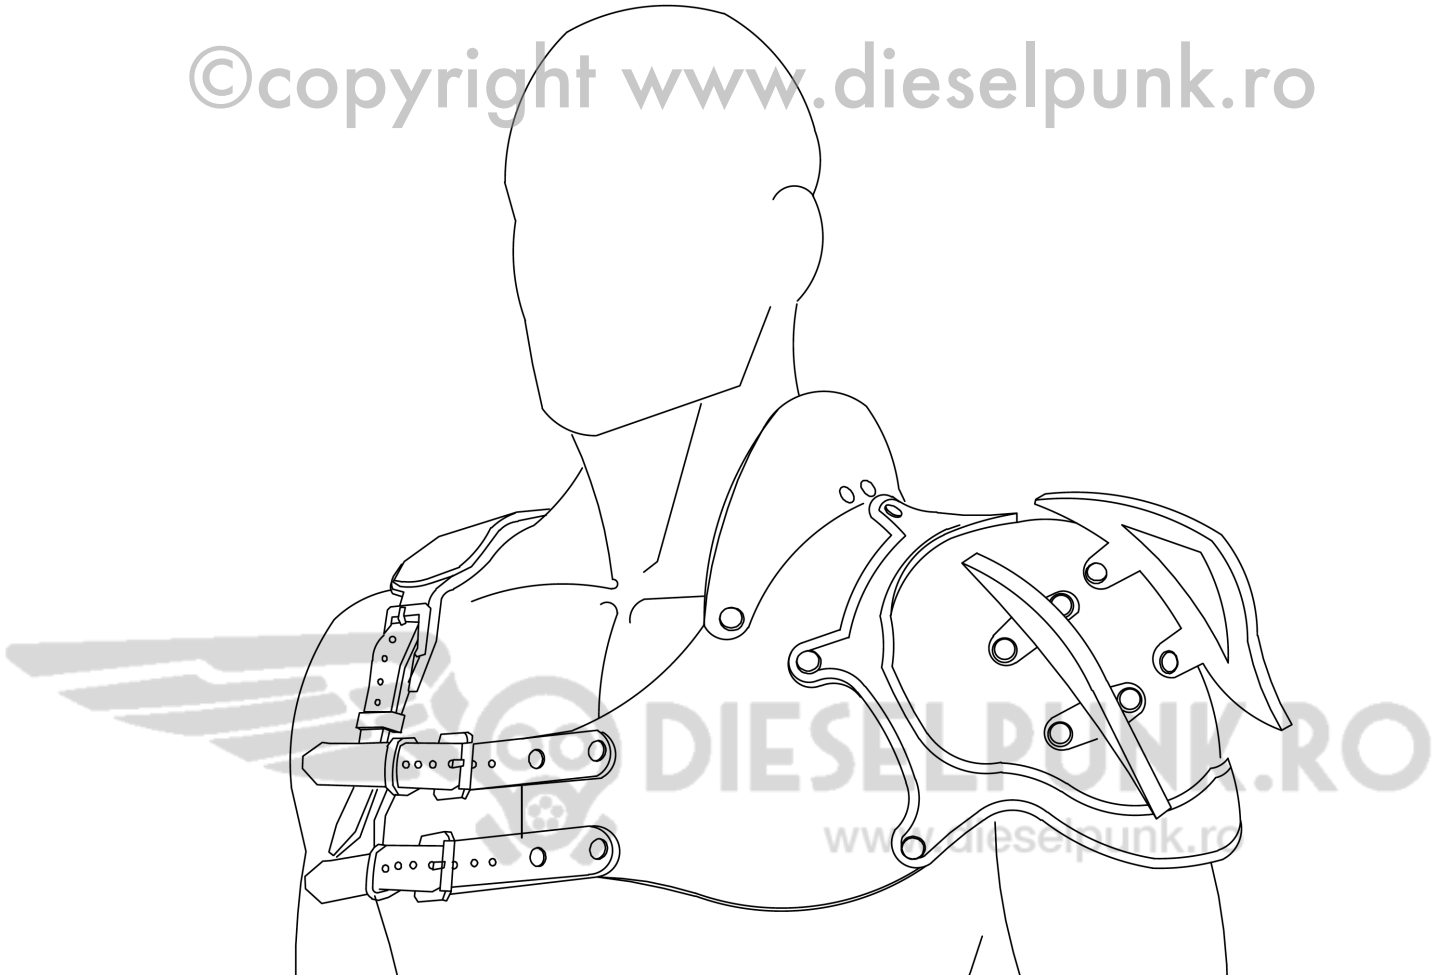

Assembly instructions

©copyright www.dieselpunk.ro

Difficulty level: advanced
Completion Time 12 - 18 hours

NECESSARY TOOLS

©copyright www.dieselpunk.ro

B&W Printer




Scissors or a cutter



Hole Puncher



Approx. 15 square feet of leather

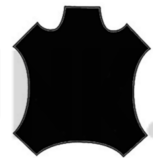

Thread and needles



6 x 20 mm Buckles and a few rivets


©copyright www.dieselpunk.ro

©copyright www.dieselpunk.ro

PRINTING THE PATTERN

Set up your printer to A4 paper with no margins on landscape mode.


Alternatively you can use “letter” format which is approximately the same size and will not impact the size of the product significantly

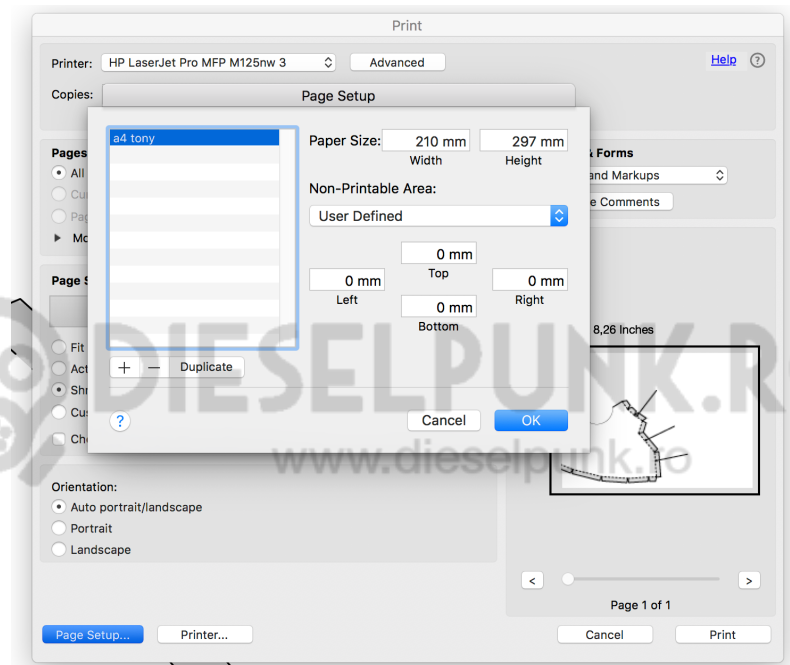

©copyright www.dieselpunk.ro

Print all the patterns. Some of them are spread over a few pages so I numbered the pieces and made a diagram at the beginning of the pattern file so it is clear how they should be placed and pasted together. Before you choose the right pattern for you measure your chest circumference with a soft tape to get your size and then pick one of the three available sizes

After you are done you should have every piece cut in leather as shown in the picture below

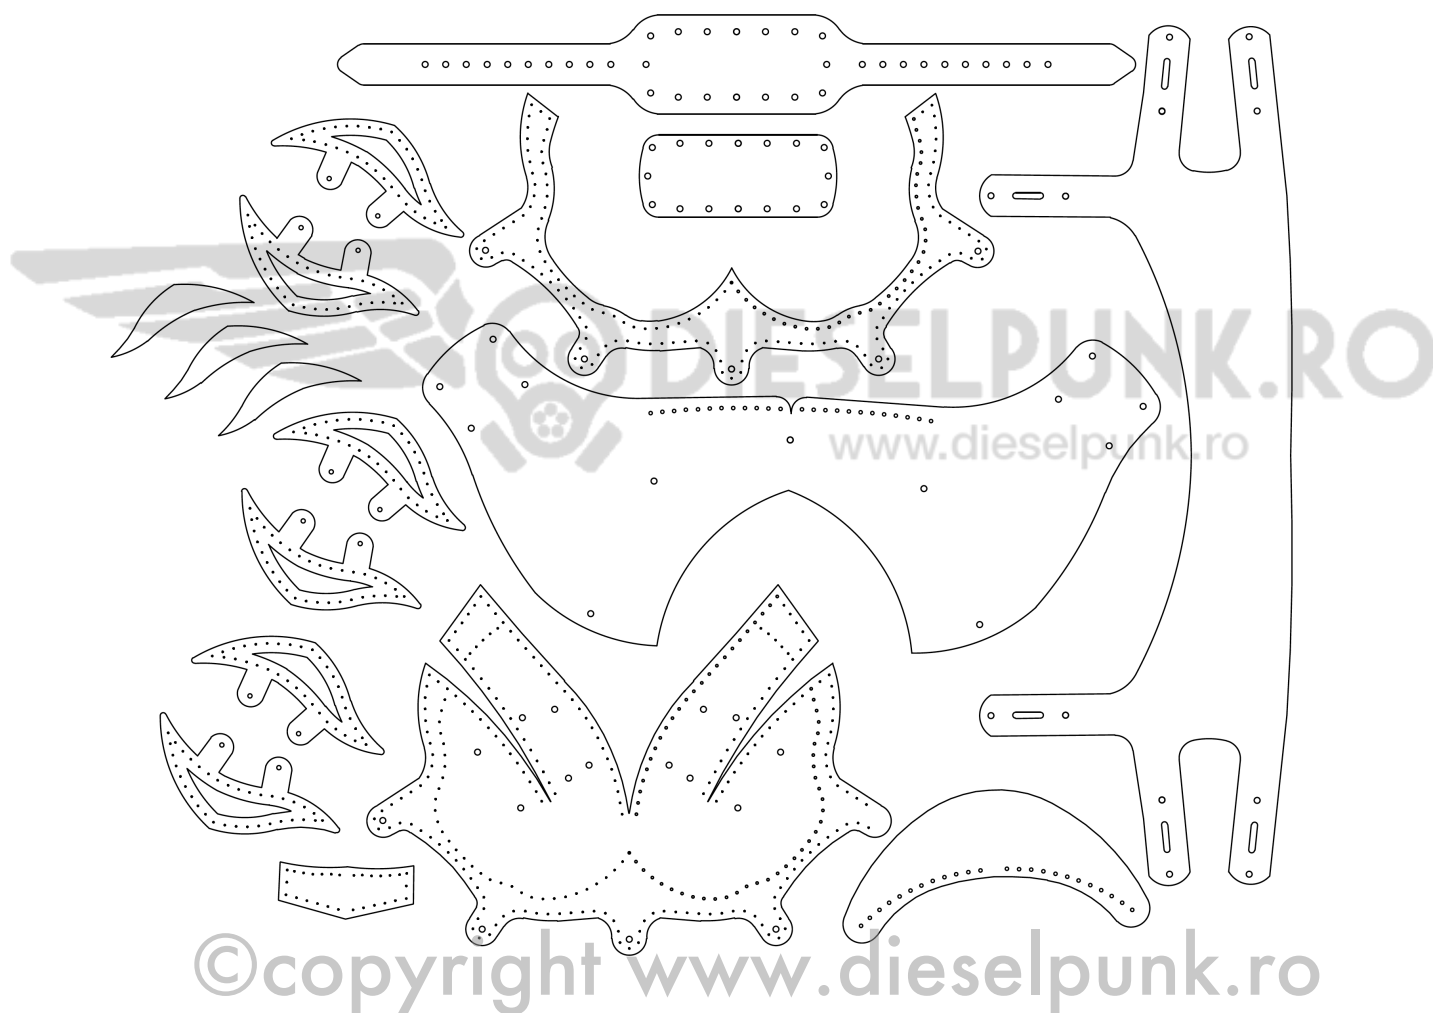

©copyright www.dieselpunk.ro

In order to further help with your build, we filmed the entire process from the start to finish.

Please access your instructional video here:

<https://www.youtube.com/watch?v=JEkLc4j7z5Y&t=29s>

Would love to see what you did, so please share or leave a review on Etsy.

Stuck and need help? go ahead and send us a message, someone is always around to give you a hand

To further help all our clients we created this FaceBook group for everyone to share ideas and stay up to date with the latest patterns available. Please follow the link below to join.

<https://www.facebook.com/groups/1434028716724087>

Thank you for constructing your bag with our patterns

Tony

©copyright www.dieselpunk.ro