



# SWP-31 Instruction



Step 1: Sew A03 on A06 by align the orienting line, and only sew the bottom stitching line, glue 2 sides on A02.

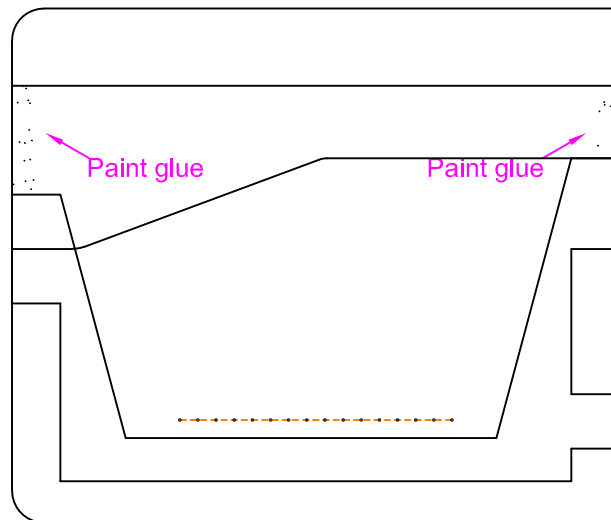


Step 2: Sew A04 on A06 by align the orienting line, and only sew the bottom stitching line, glue 2 sides on A02.

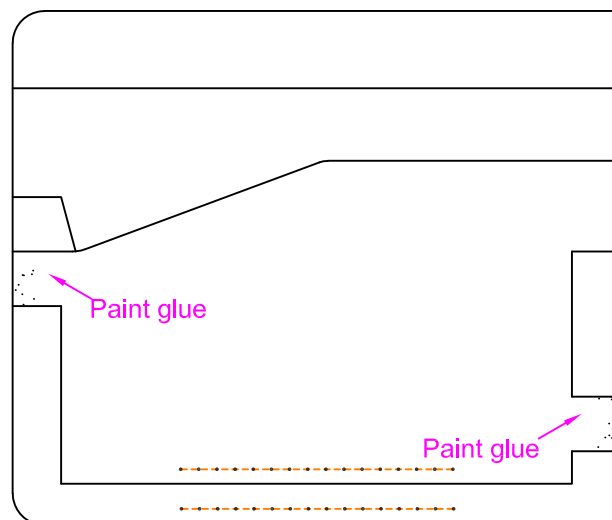

Step 3: Glue A05 on A06 by align the orienting line, Do B03, B04, B05, B06 as front steps.

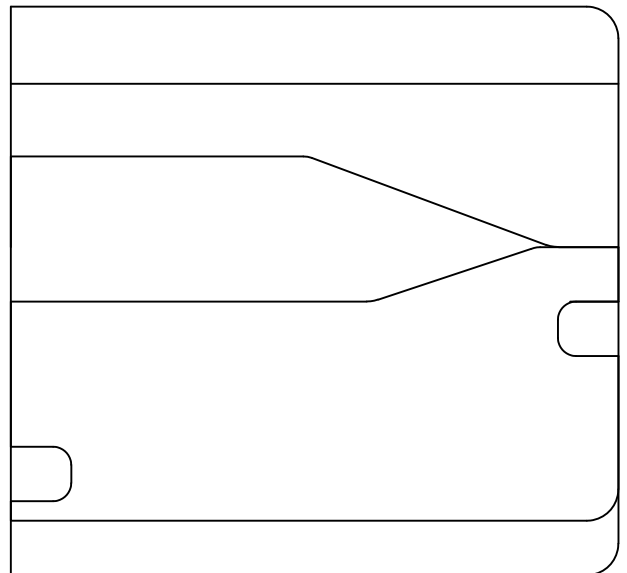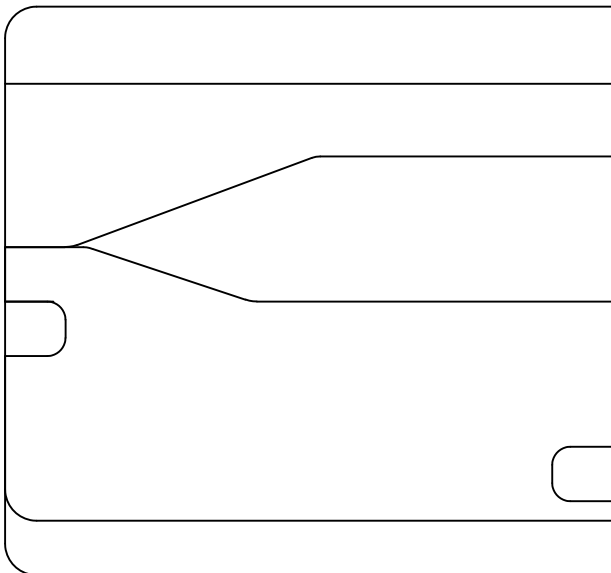


Step 4: Sew A06 and B06 with A02, but only sew 2 stitching line as the sketch shows.

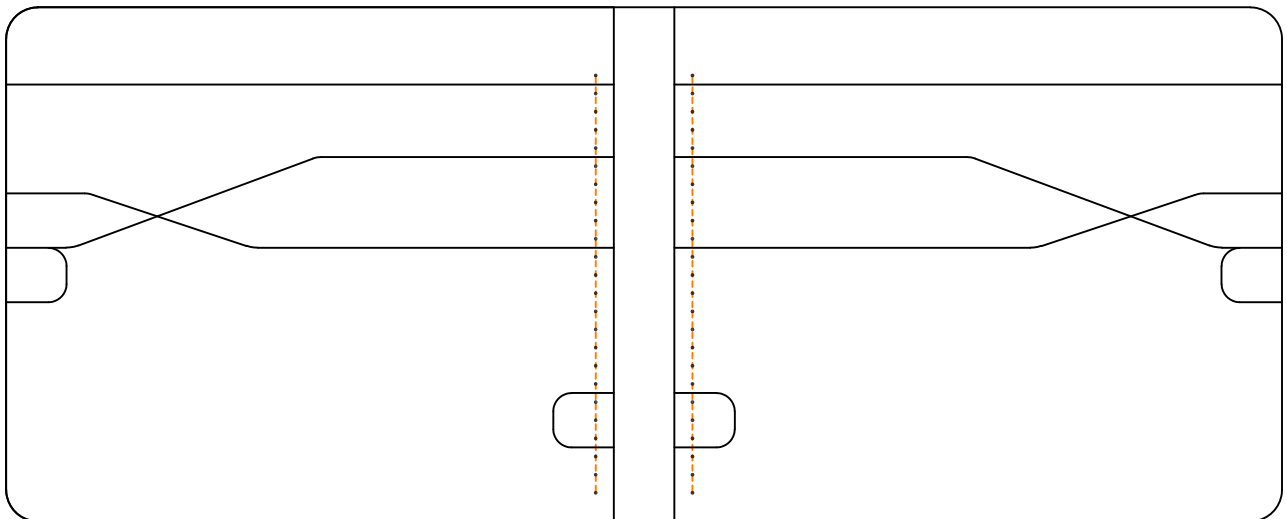

Step 5: Sew A02 with A01, you can see A01 is longer than A02, this design will make this short wallet fold naturally. So when you sew A02 and A01 together, only sew the "L" shape stitching lines on 2 sides. Please look at the sketch.

Then the wallet is OK.

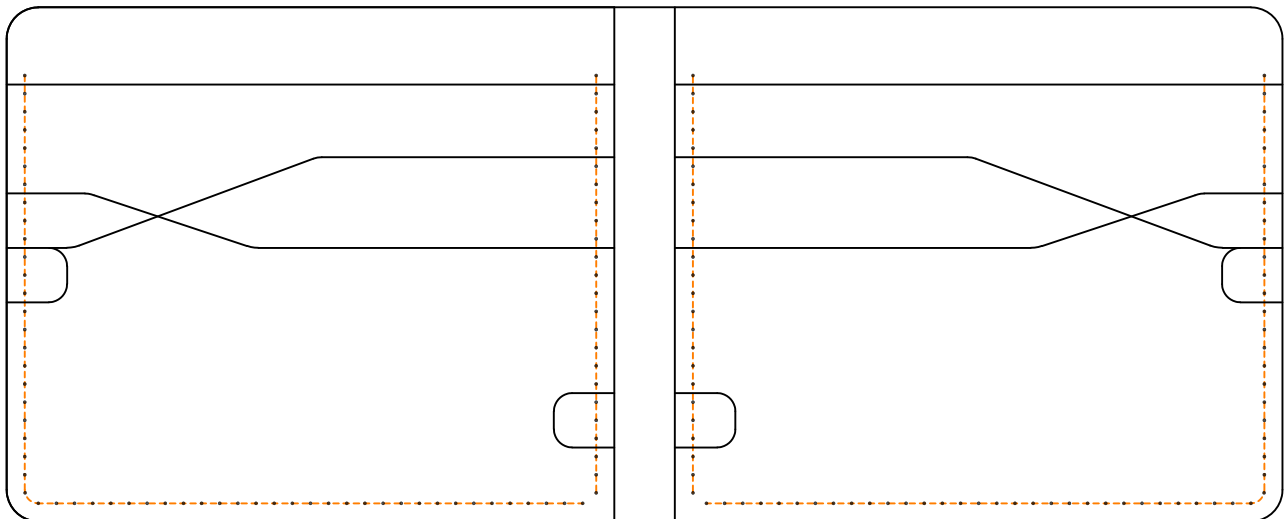

## Note

\_\_\_\_\_ Cutting line


 Folding line  
 Orienting line

Stitching line

Center line  
or joint line