


www.leathercraftpattern.com



9mm rivet




a

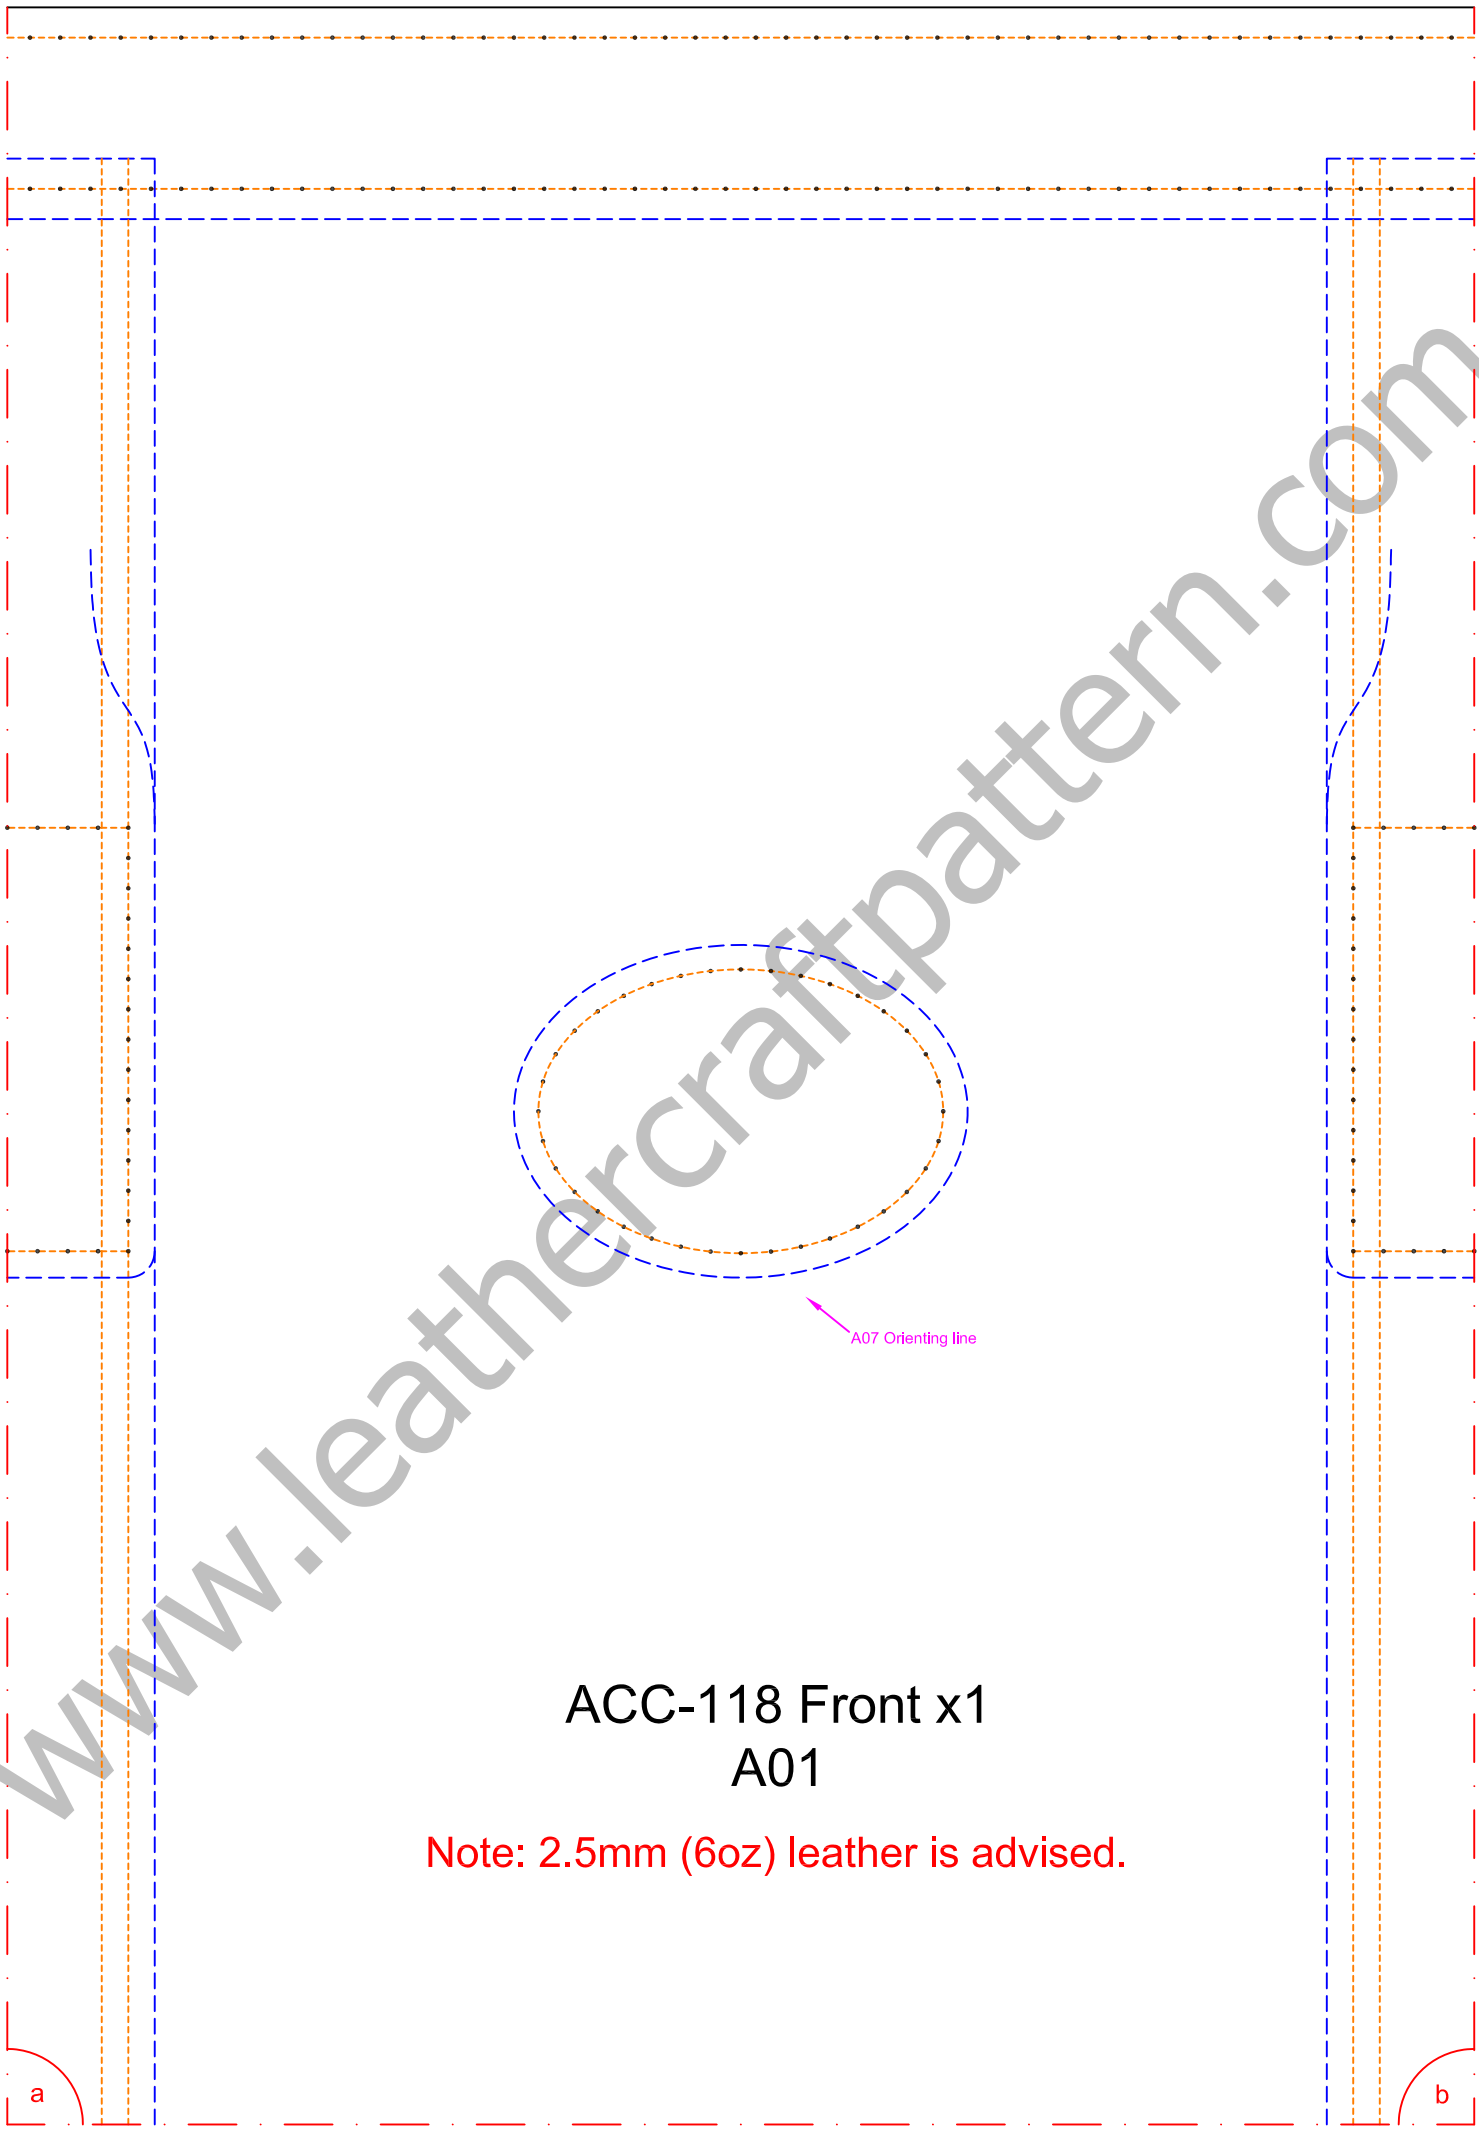

ACC-118 Front x1  
A01

Note: 2.5mm (6oz) leather is advised.

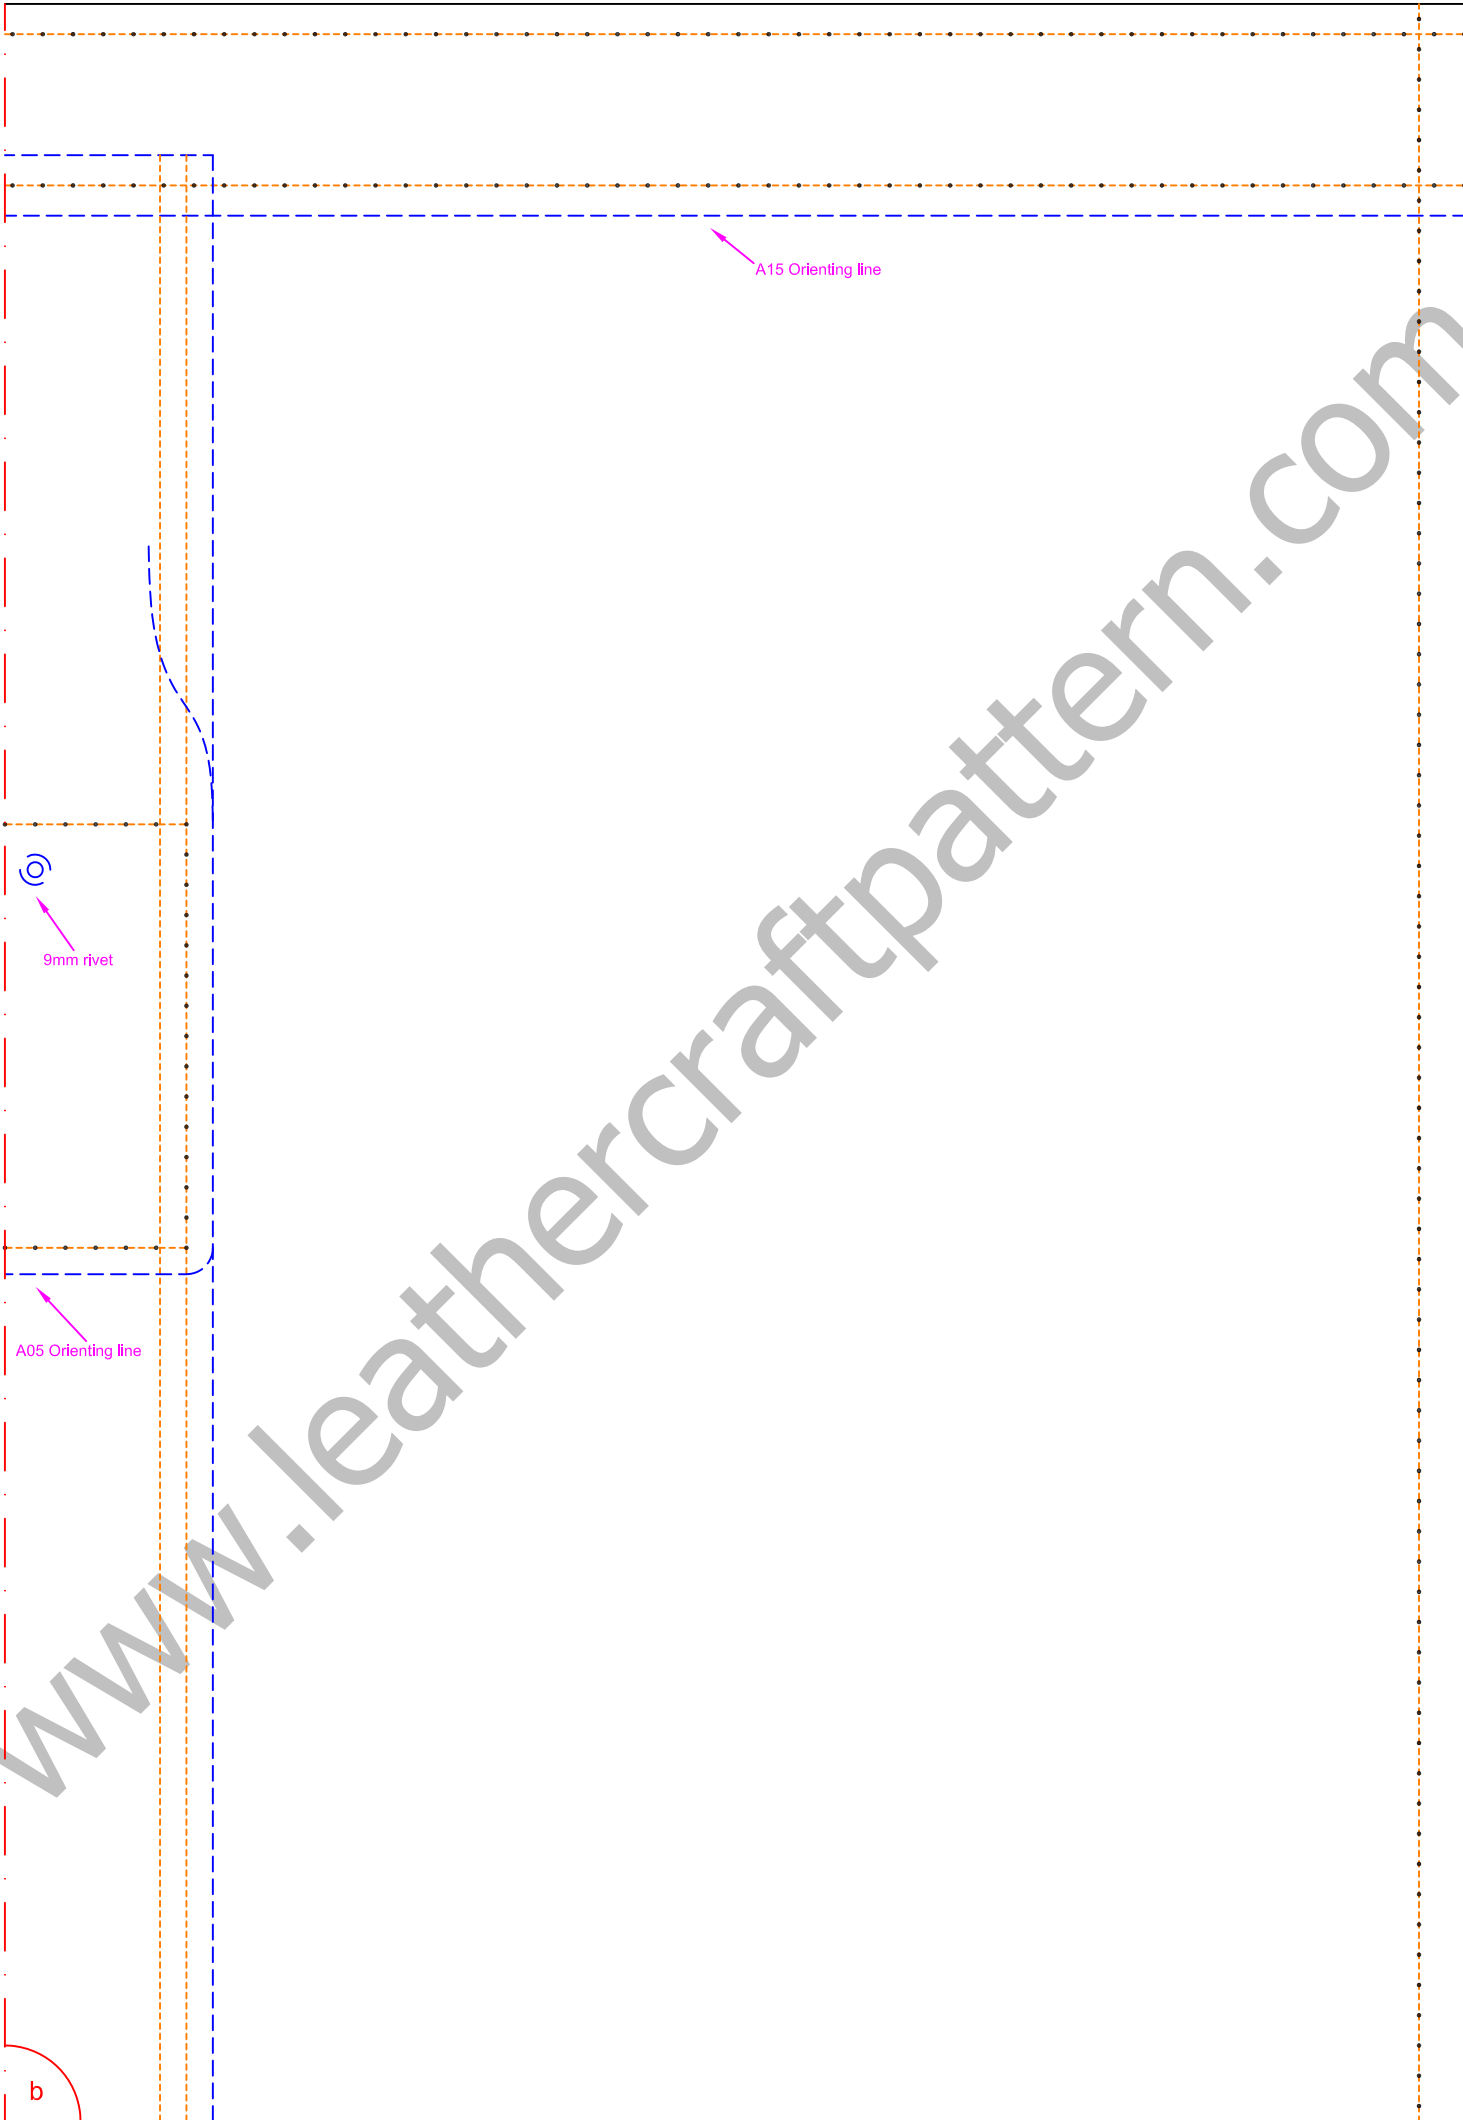

a



12mm or  
15mm foot nail

Anchor point

a

b

A10 Orienting line

A10 Orienting line



12mm or  
15mm foot nail

b



12mm or  
15mm foot nail

Anchor point



www.leathercraftpattern.com



9mm rivet


A05 Orienting line


ACC-118 Back x1  
A02

Note: 2.5mm (6oz) leather is advised.

c

d

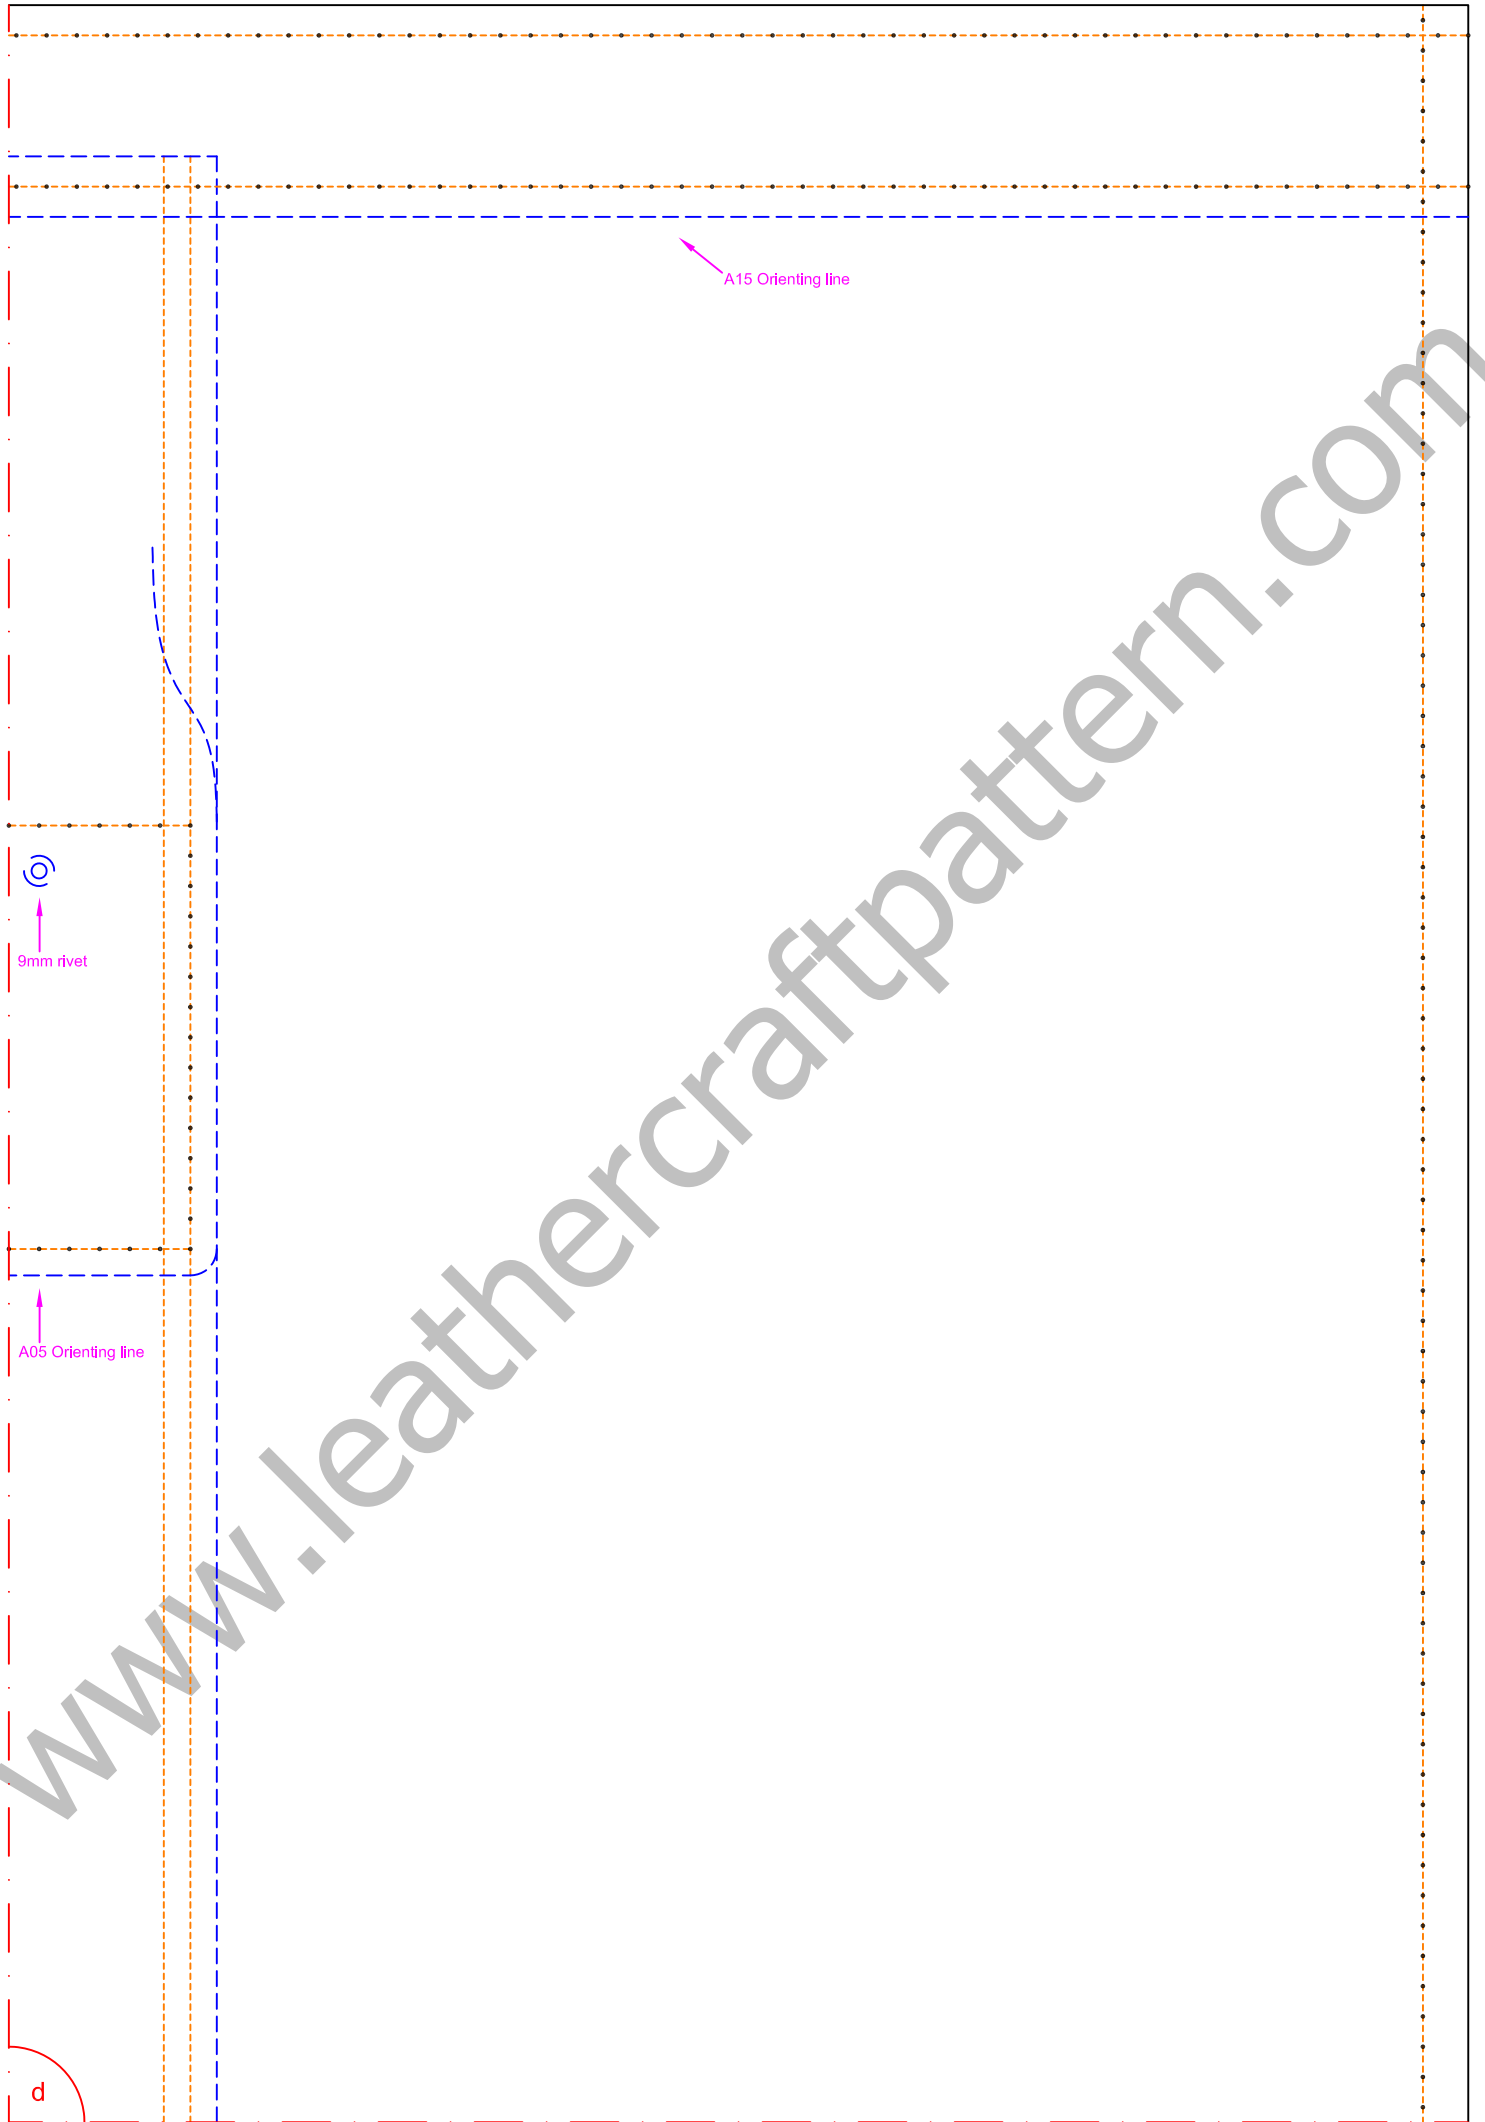

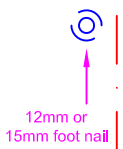

← Anchor point

c

d

A10 Orienting line

A10 Orienting line




12mm or  
15mm foot nail


d



12mm or  
15mm foot nail

Anchor point →

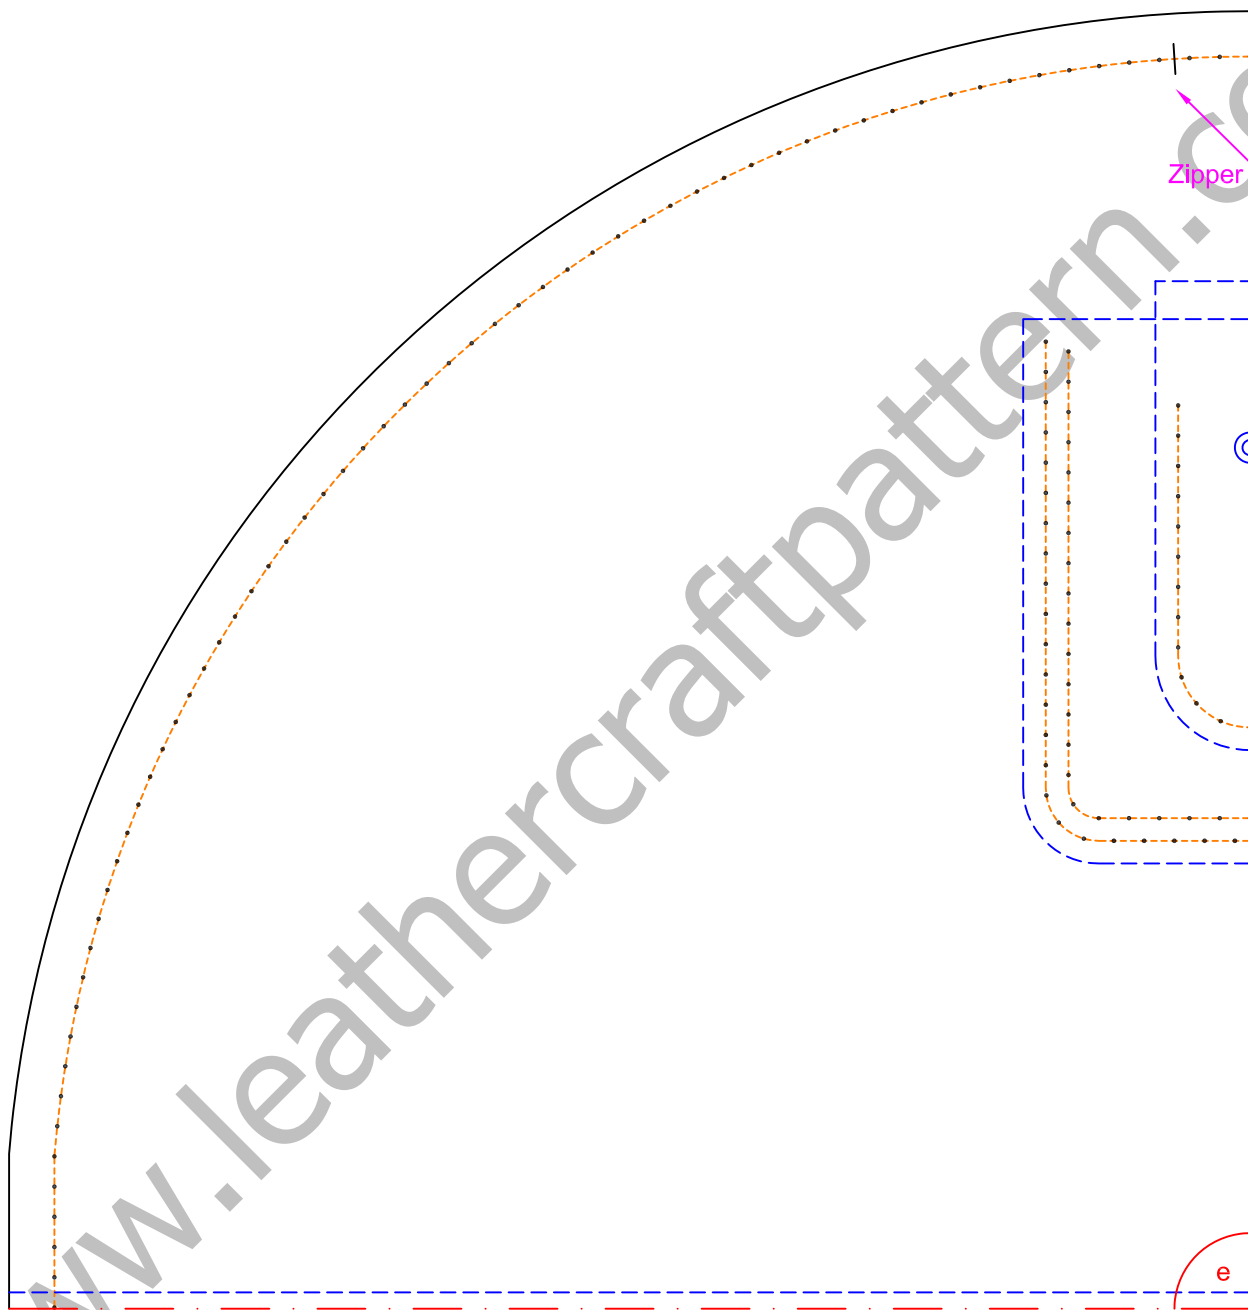

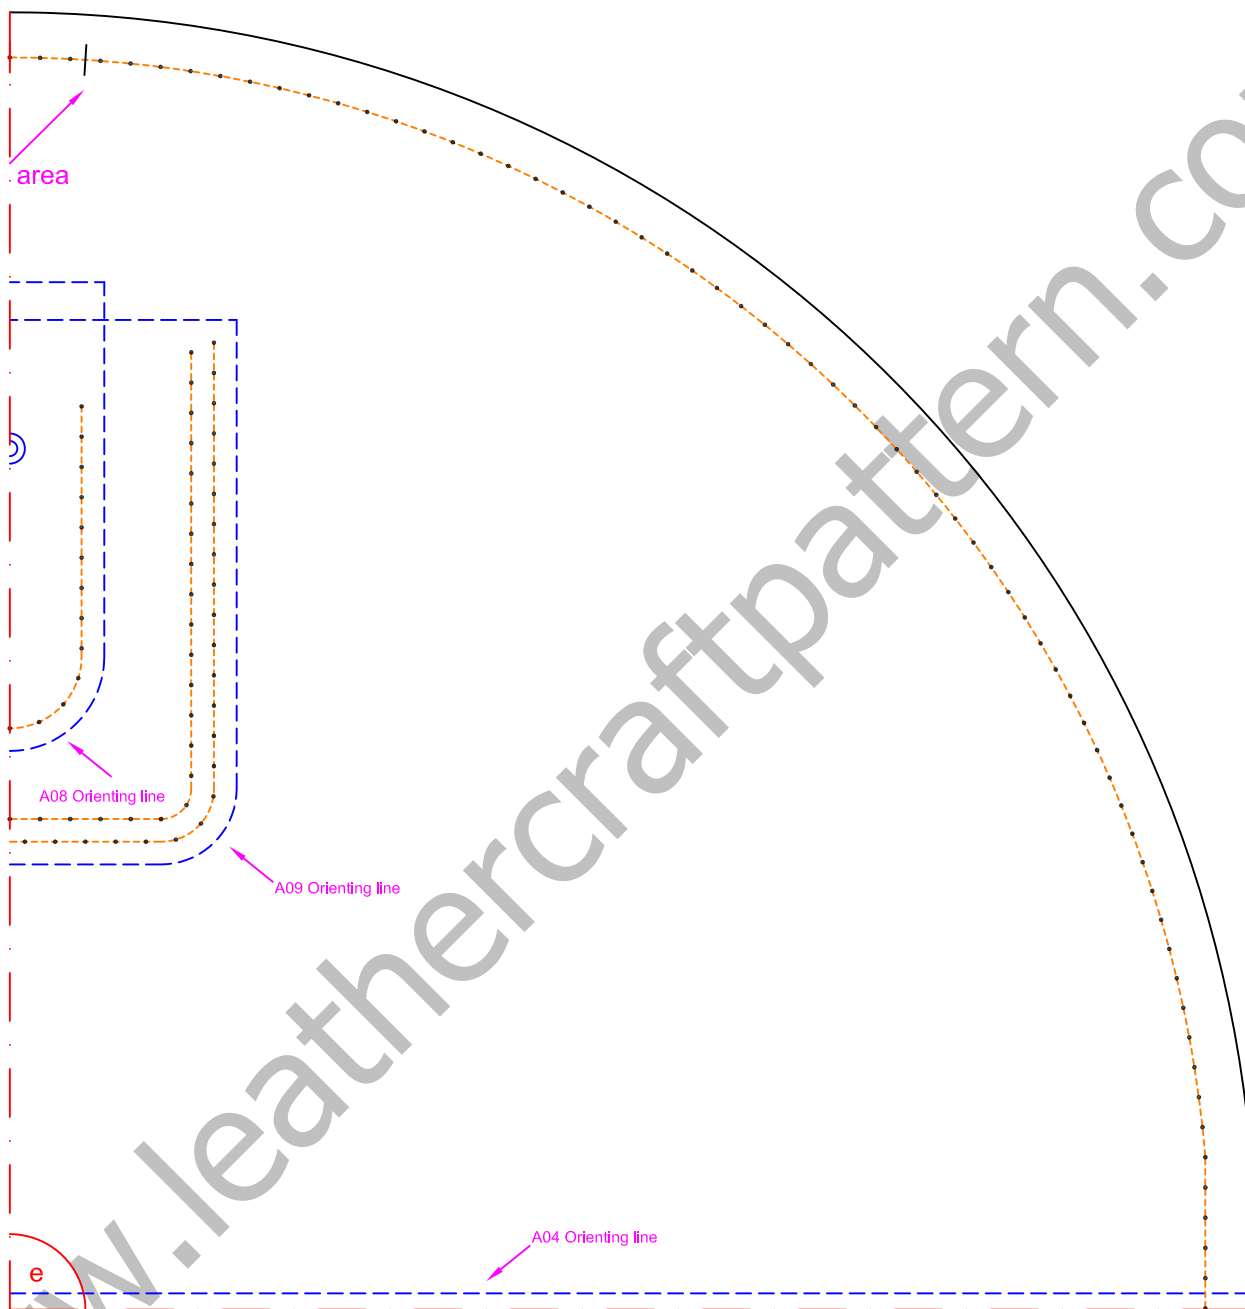


ACC-118 Gusset x2  
A03

Note: 2.5mm (6oz) leather is advised.

Binder stop point

e

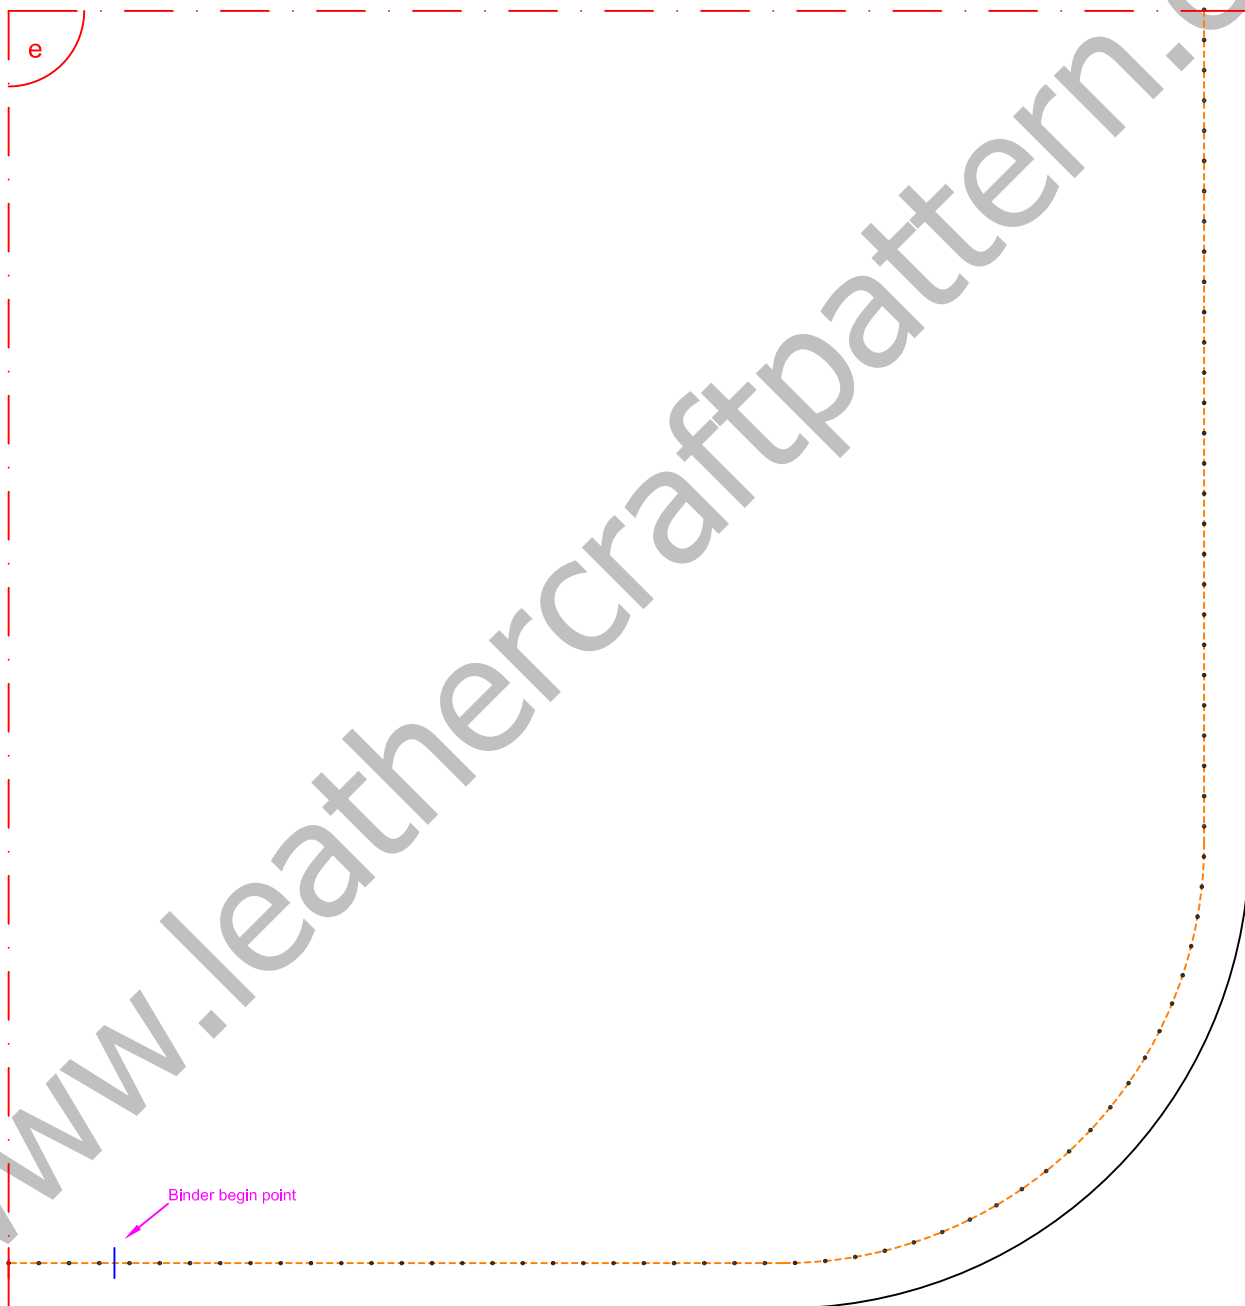


ACC-118 Gusset pocket x2  
A04


Note: 2.0mm (5oz) leather is advised.


Joint line f

Binder stop point



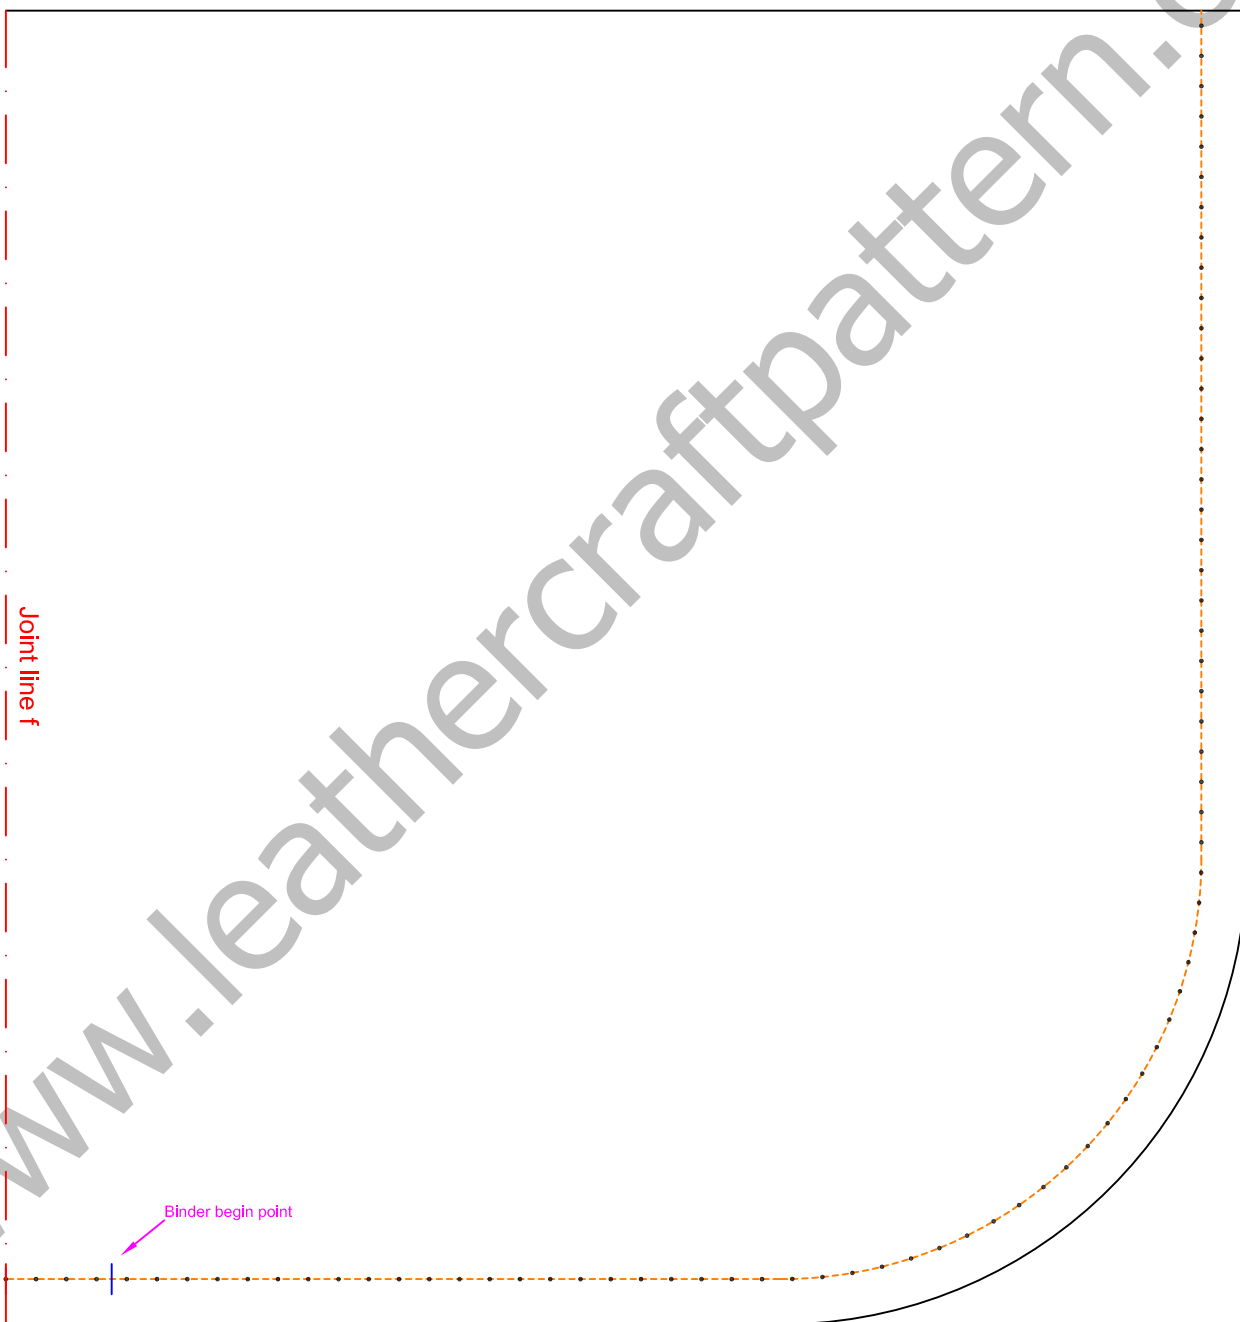

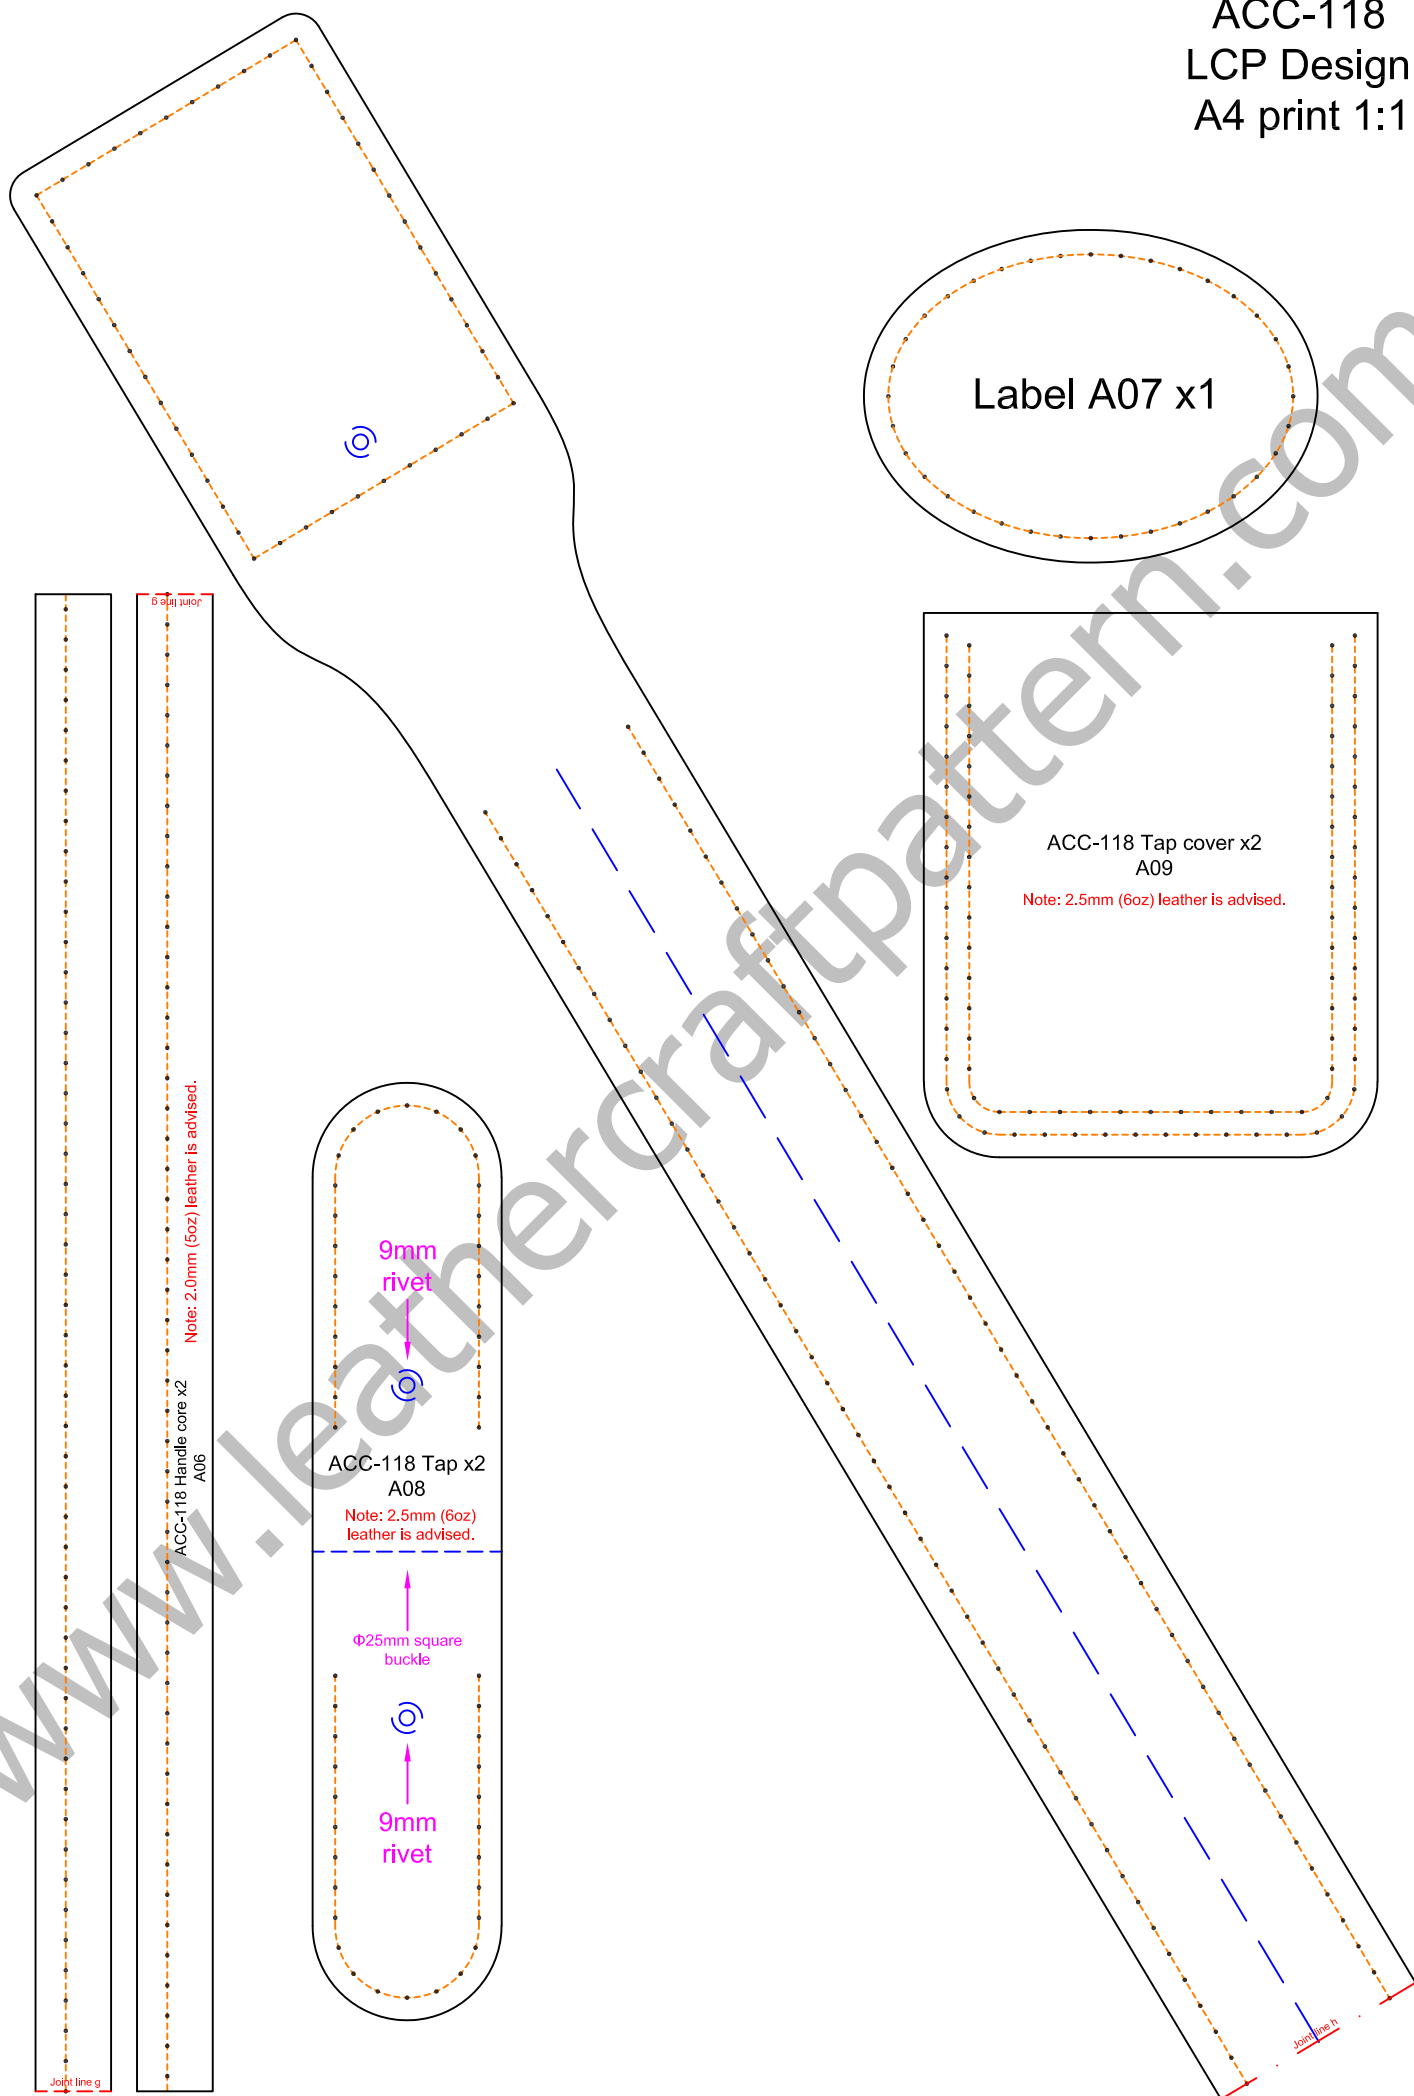

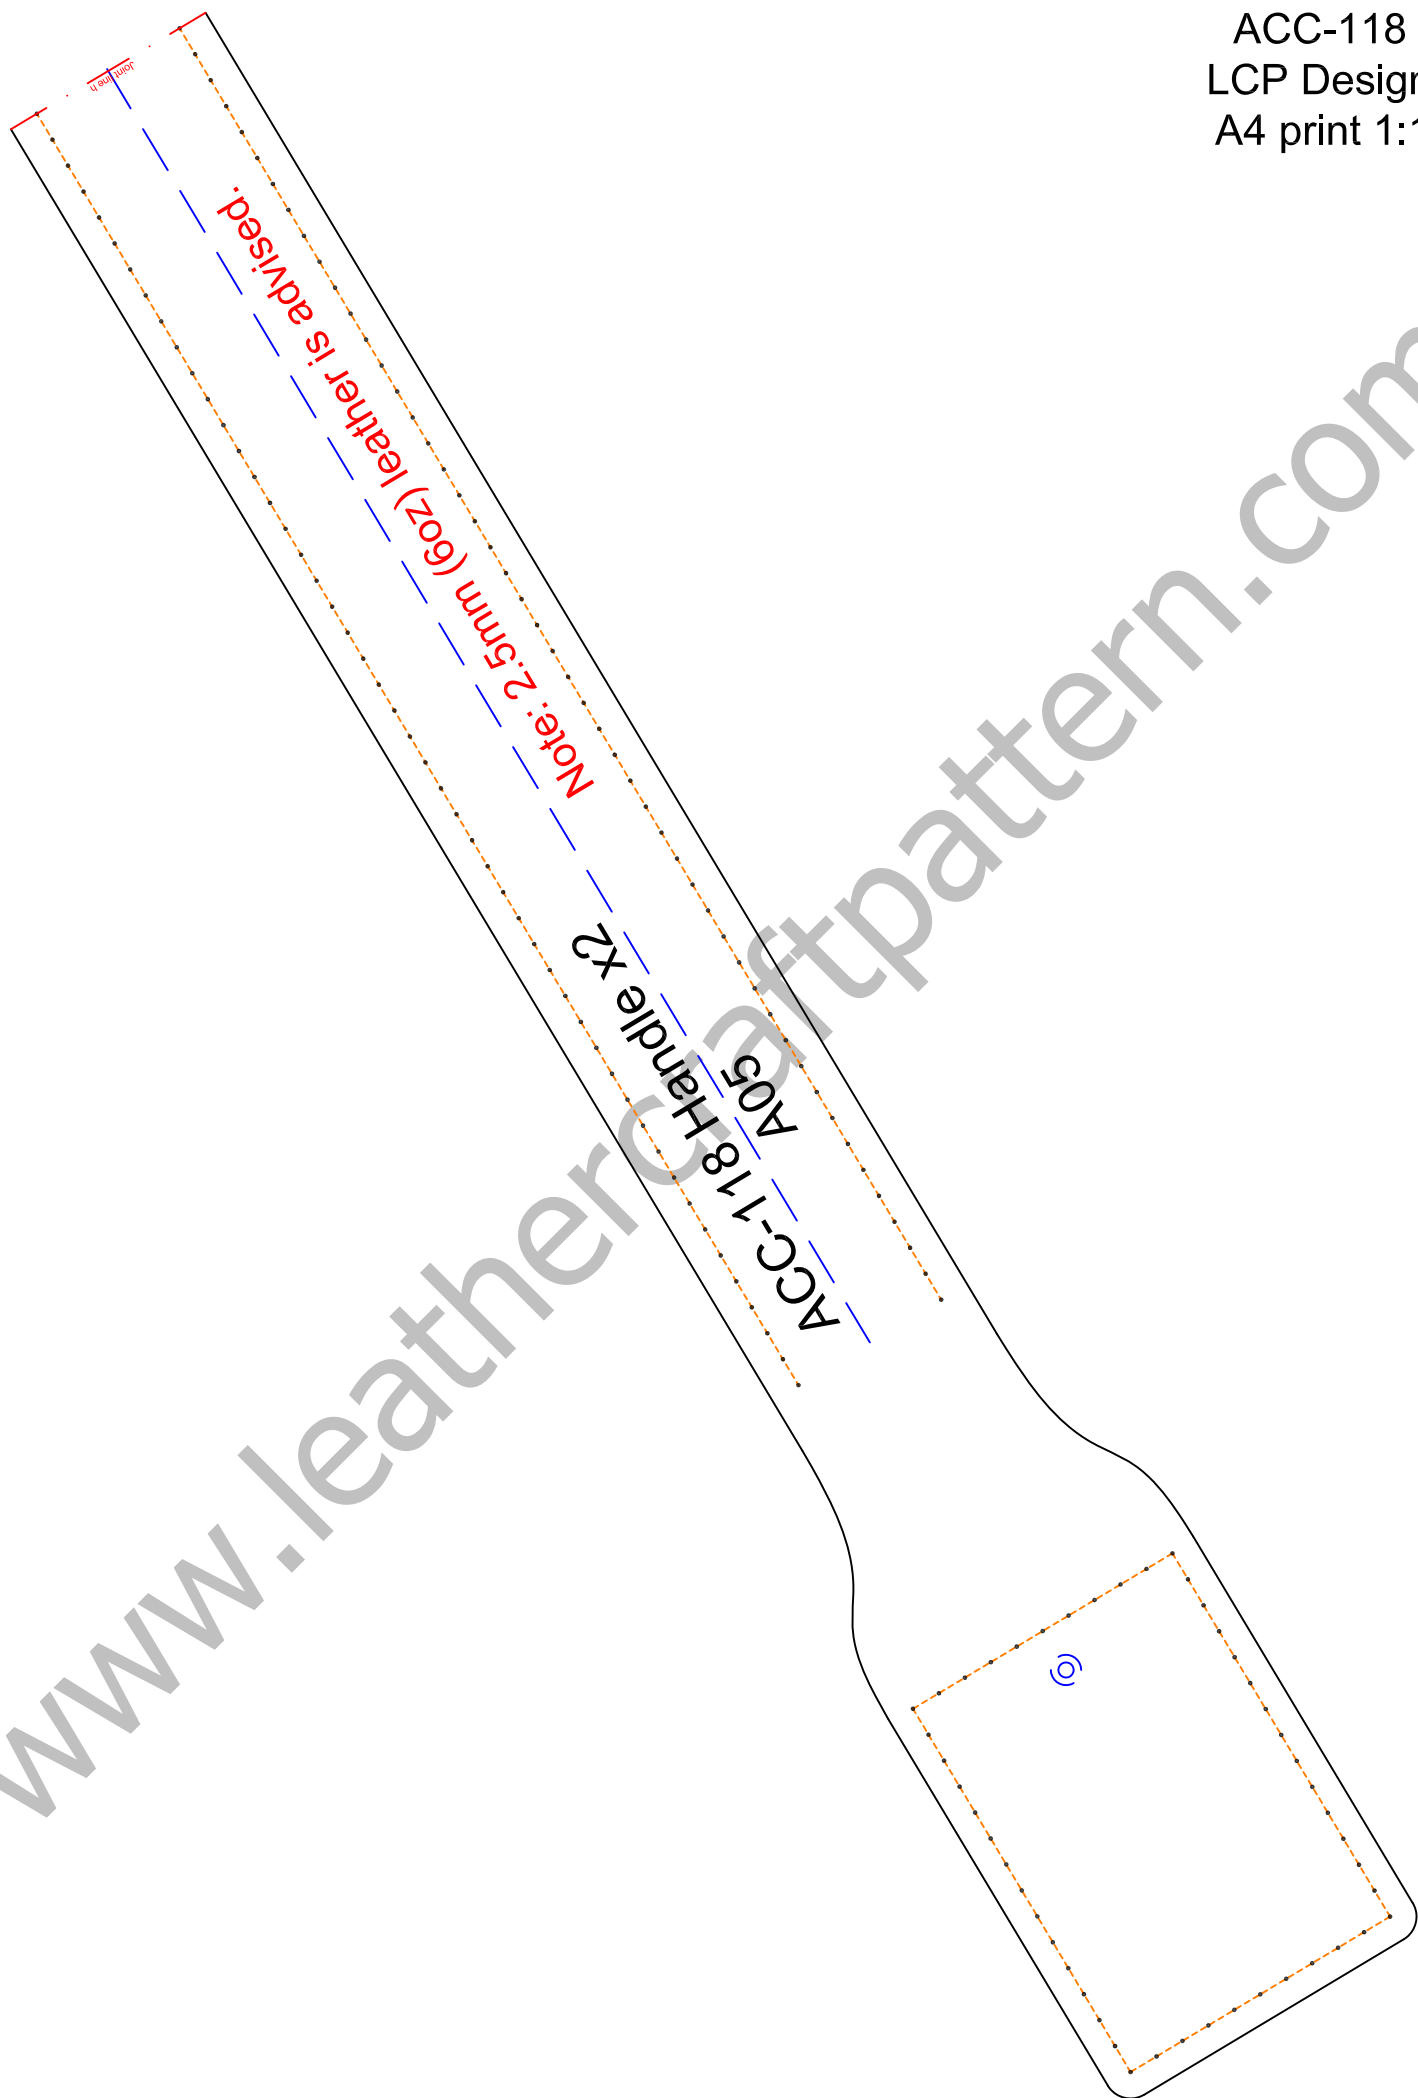




Joint line i

Joint line j

Joint line k

ACC-118 Body strengthen leather x2  
A10

Note: 2.0mm (5oz) leather is advised.  
This part is longer a little, because bending glue will reduce some length,  
so you need to glue it on bag from tip to tip, and cut the redundant part.  
After gluing, punch stitching holes by chisel.

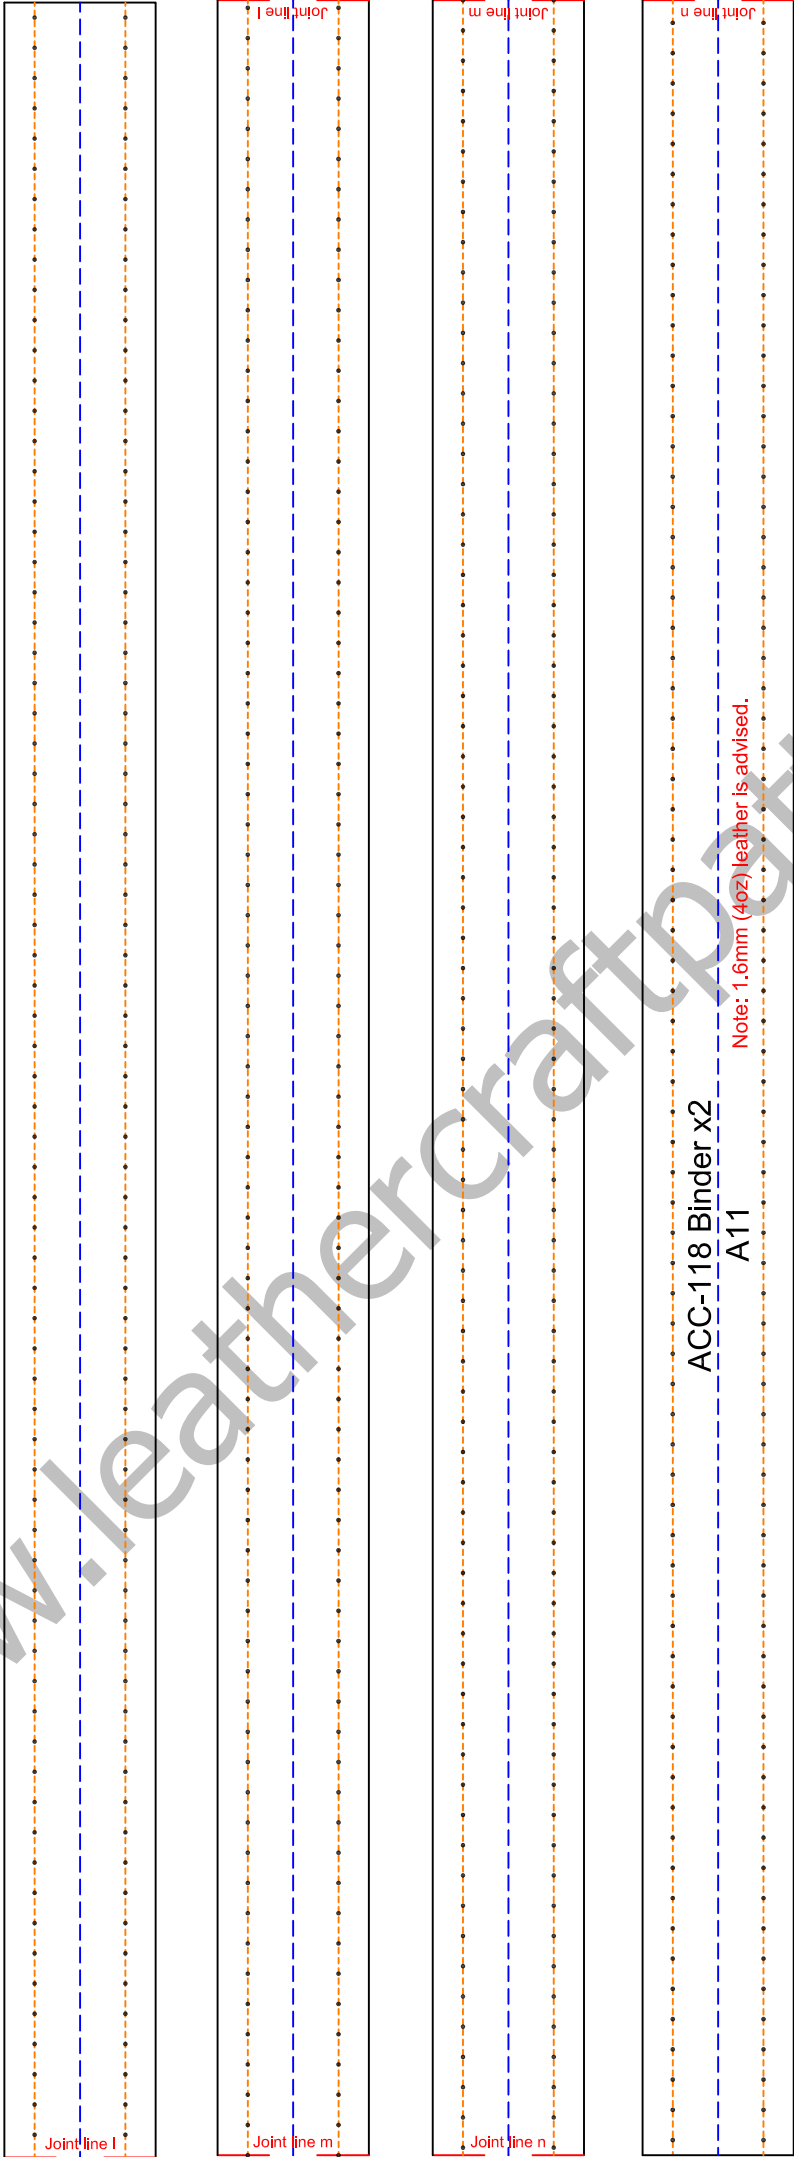




www.leathercraftpattern.com



ACC-118 Inner separated bottom x1  
A12

Note: 2.0mm (5oz) leather is advised.

Joint line 0

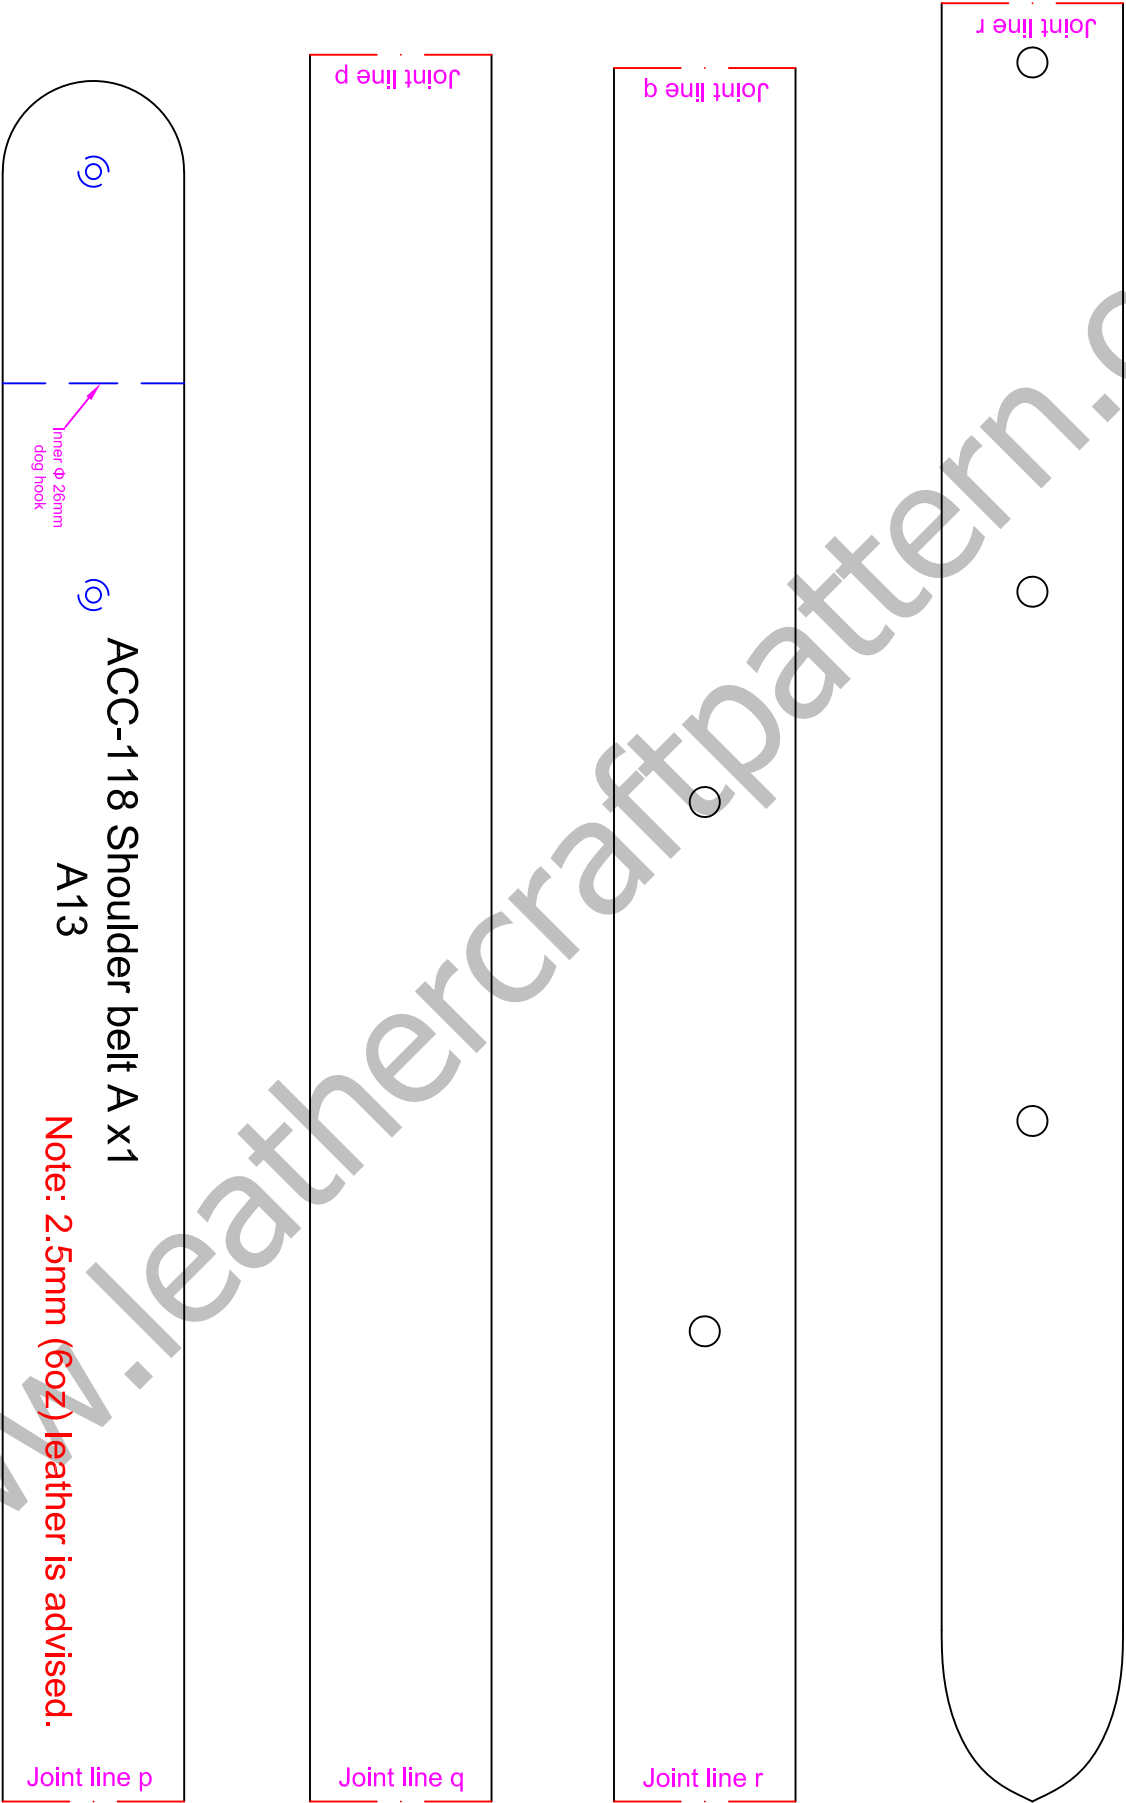

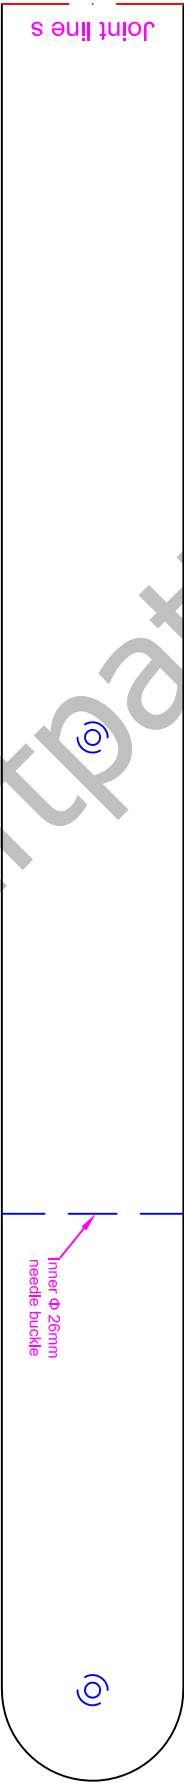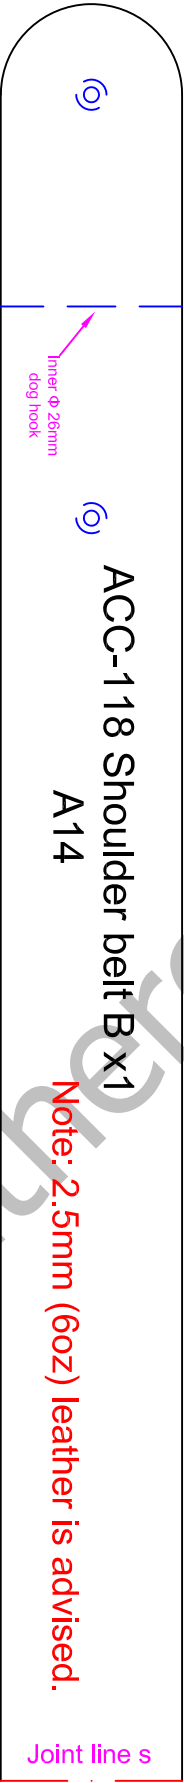

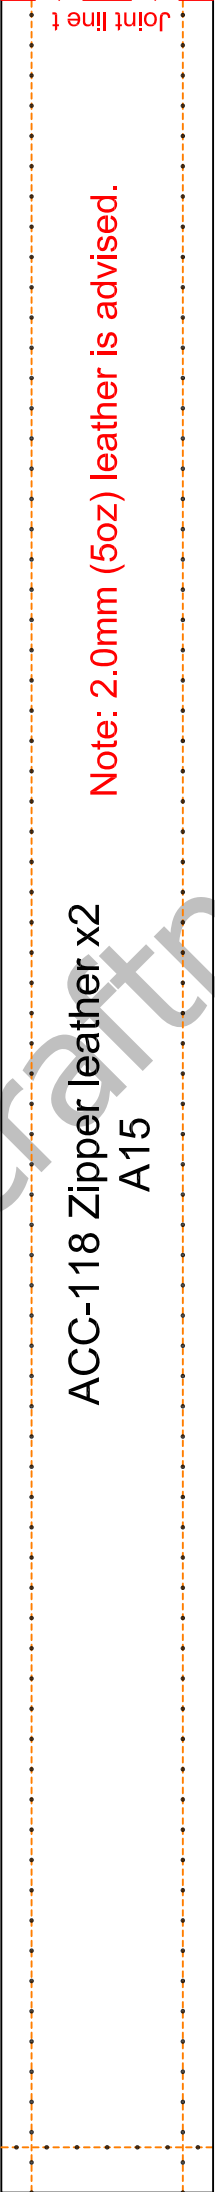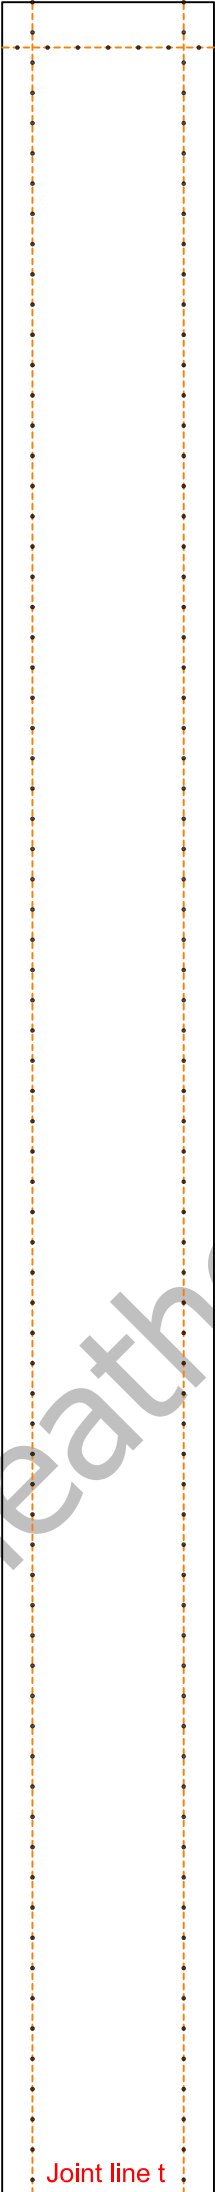

ACC-118 Zipper leather x2  
A15

Note: 2.0mm (5oz) leather is advised.

www.leathercraftpattern.com