




ORDER OF OPERATIONS FANCY STYLE BIFOLD

RECOMMENDED LEATHER WEIGHT



Body: 3-4oz

Pockets: 2-3oz

1. PRINT OUT THE PATTERN ON HEAVY CARD STOCK WITH PRINTER SET TO "ACTUAL SIZE"
2. CUT OUT THE PAPER PATTERN PIECES
3. TRACE THE PATTERN PIECES ONTO LEATHER
4. CUT OUT ALL OF THE LEATHER PIECES
5. BURNISH ALL POCKET TOPS BEFORE ASSEMBLY
6. (OPTIONAL) GLUE EXTERIOR SHELL TO LINER AND TRIM EXCESS LINER
7. (OPTIONAL) STITCH ALONG TOP OF THE EXTERIOR SHELL
8. GLUE POCKET A // SIDE 1 TO POCKET C // SIDE 1 USING TOP POCKET GUIDE, STITCH ACROSS BOTTOM
9. GLUE THE 2nd + 3rd POCKET A // SIDE 1 TO POCKET C // SIDE 1 STITCH ACROSS BOTTOM EACH TIME
10. GLUE POCKET B // SIDE 1 TO POCKET C // SIDE 1
11. REPEAT STEPS 8-10 FOR SIDE 2
12. TRIM EXCESS LEATHER, SAND, BURNISH, AND STITCH INTERIOR SIDE OF POCKET ASSEMBLIES 1 & 2

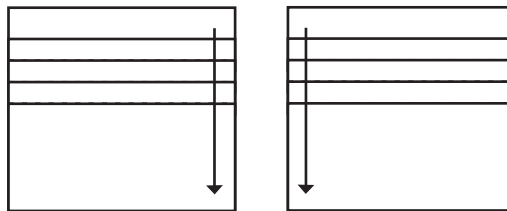

13. GLUE POCKET ASSEMBLIES 1 & 2 TO INTERIOR WALLET SHELL, STITCH ALONG TOP

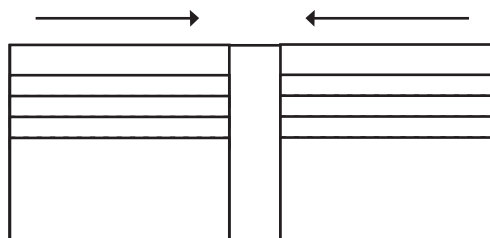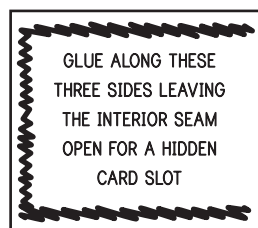




ORDER OF OPERATIONS FANCY STYLE BIFOLD

RECOMMENDED LEATHER WEIGHT


Body: 4-5oz

Pockets: 2-3oz

14. GLUE ONE SIDE OF THE ASSEMBLED INTERIOR TO THE EXTERIOR AND STITCH

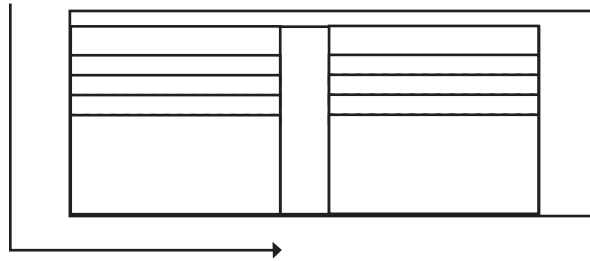

15. GLUE SECOND SIDE OF THE ASSEMBLED INTERIOR TO EXTERIOR AND STITCH

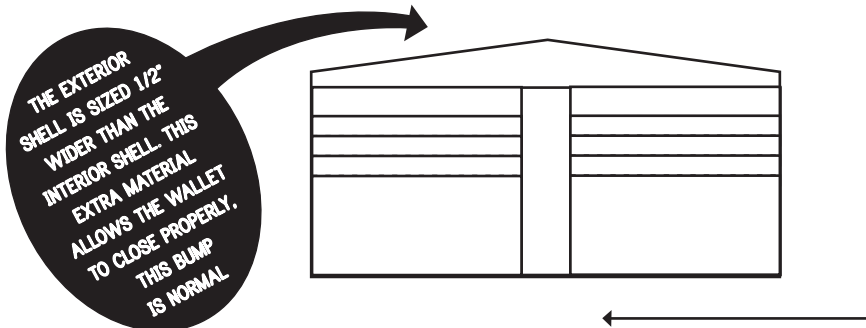

THE EXTERIOR SHELL IS SIZED 1/2" WIDER THAN THE INTERIOR SHELL. THIS EXTRA MATERIAL ALLOWS THE WALLET TO CLOSE PROPERLY. THIS BUMP IS NORMAL.

16. TRIM, SAND, AND FINISH EXTERIOR EDGES OF YOUR NEW BIFOLD WALLET

17. ENJOY :)

TOP POCKET GUIDE (USE THIS PATTERN TO LINE UP THE TOP POCKET ON SIDE 1 & 2) CUT OUT PATTERN MARK TOPS OF POCKETS LEATHER MAIN BODY PIECE WITH SCRATCH AWL GLUE LEATHER TOP POCKET INTO PLACE FLIP OVER FOR USE ON OTHER SIDE


PRINT ACCURACY TEST THE SOLID LINE SHOULD MEASURE 2 INCHES LONG
--

WALLET EXTERIOR

WALLET INTERIOR

PRINT ACCURACY TEST

THE SOLID LINE SHOULD MEASURE
2 INCHES LONG

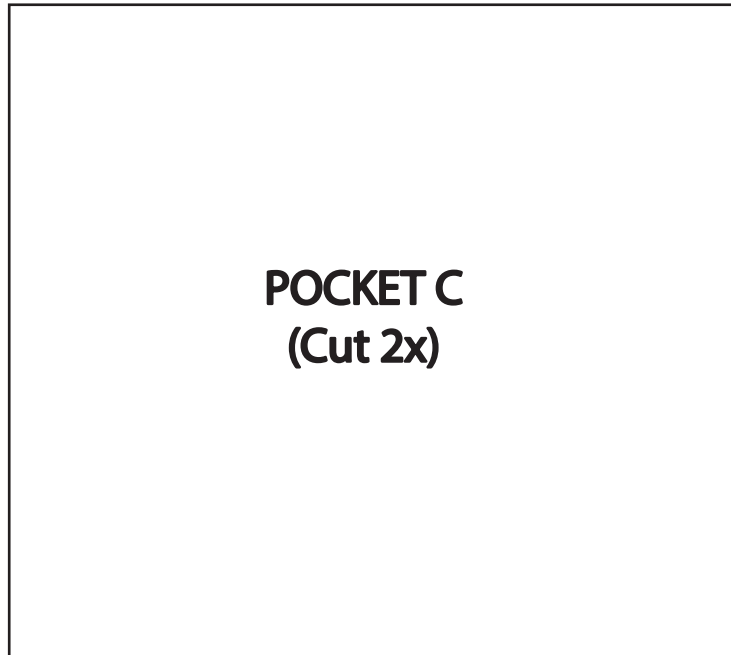

PRINT ACCURACY TEST
THE SOLID LINE SHOULD MEASURE
2 INCHES LONG

