PRINTING INSTRUCTION

1. File > Print
2. Click on “Page Setup” button make sure your paper size is set to the paper size that you will print and Scale at 100%
3. In “Pages Sizing & Handling” click on “Size” button and select “Actual size”

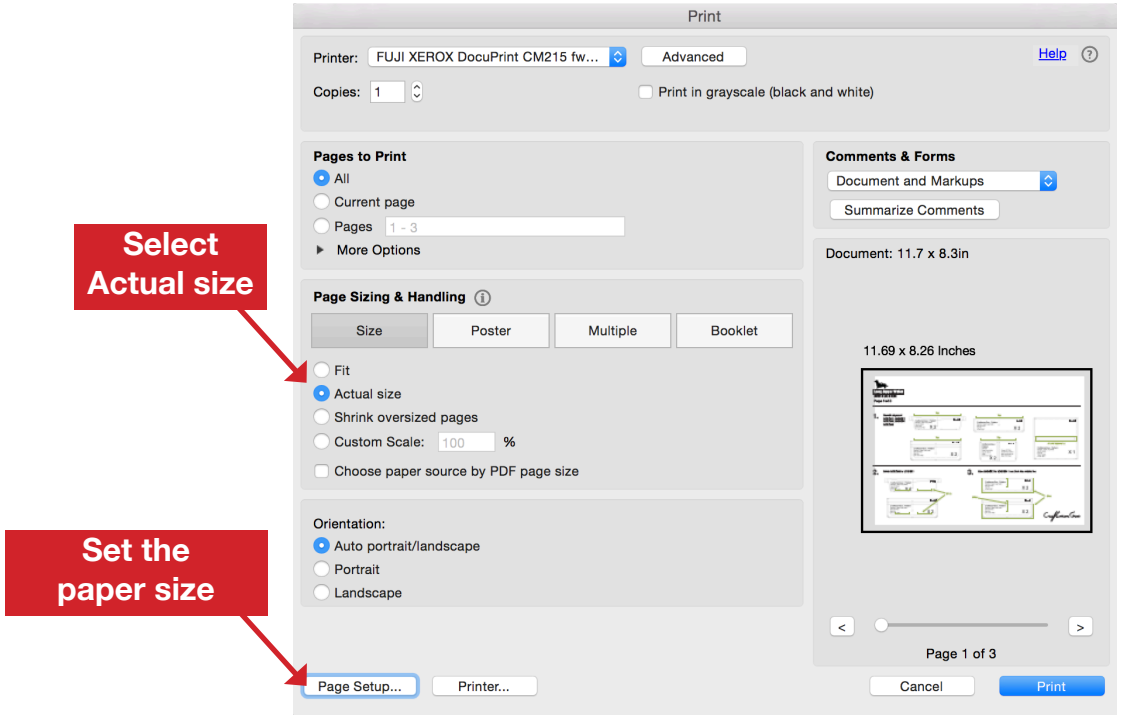

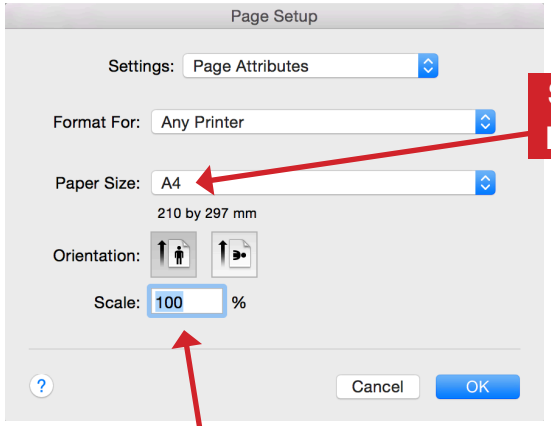

CraftsmanGus

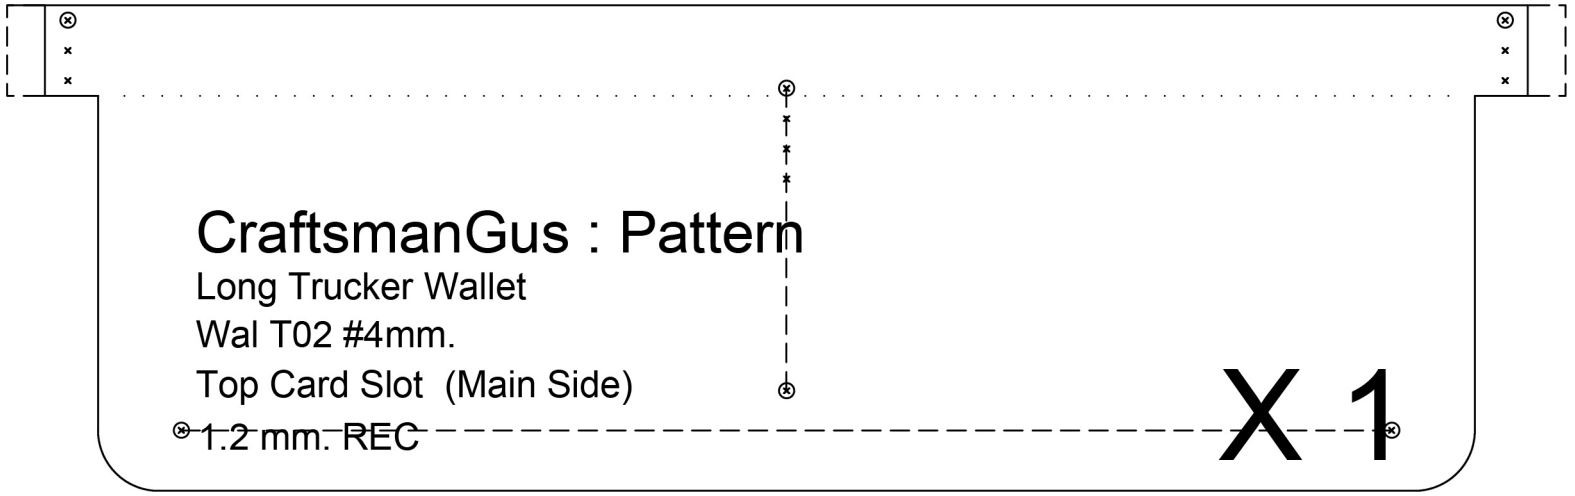
CraftsmanGus : Pattern
Long Trucker Wallet
Wal T02 #4mm.
Top Card Slot (Main Side)
1.2 mm. REC
X 1

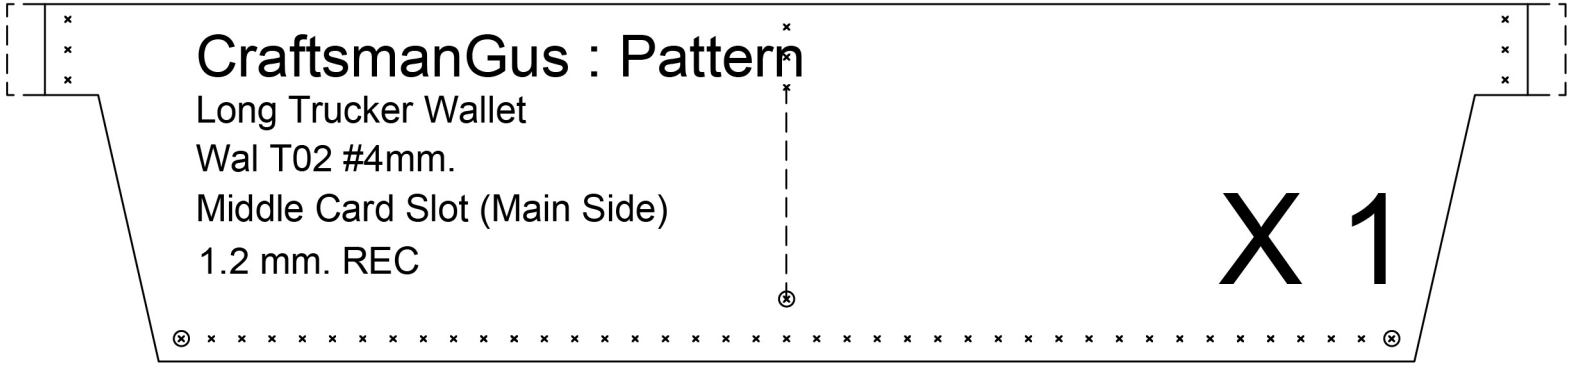
CraftsmanGus : Pattern
Long Trucker Wallet
Wal T02 #4mm.
Middle Card Slot (Main Side)
1.2 mm. REC
X 1

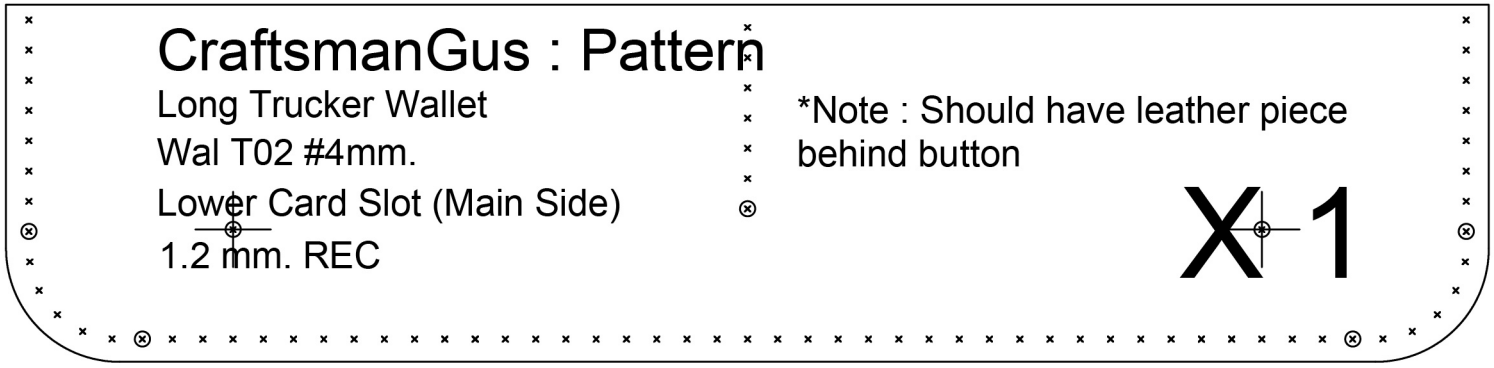
CraftsmanGus : Pattern
Long Trucker Wallet
Wal T02 #4mm.
Lower Card Slot (Main Side)
1.2 mm. REC
*Note : Should have leather piece behind button
X 1

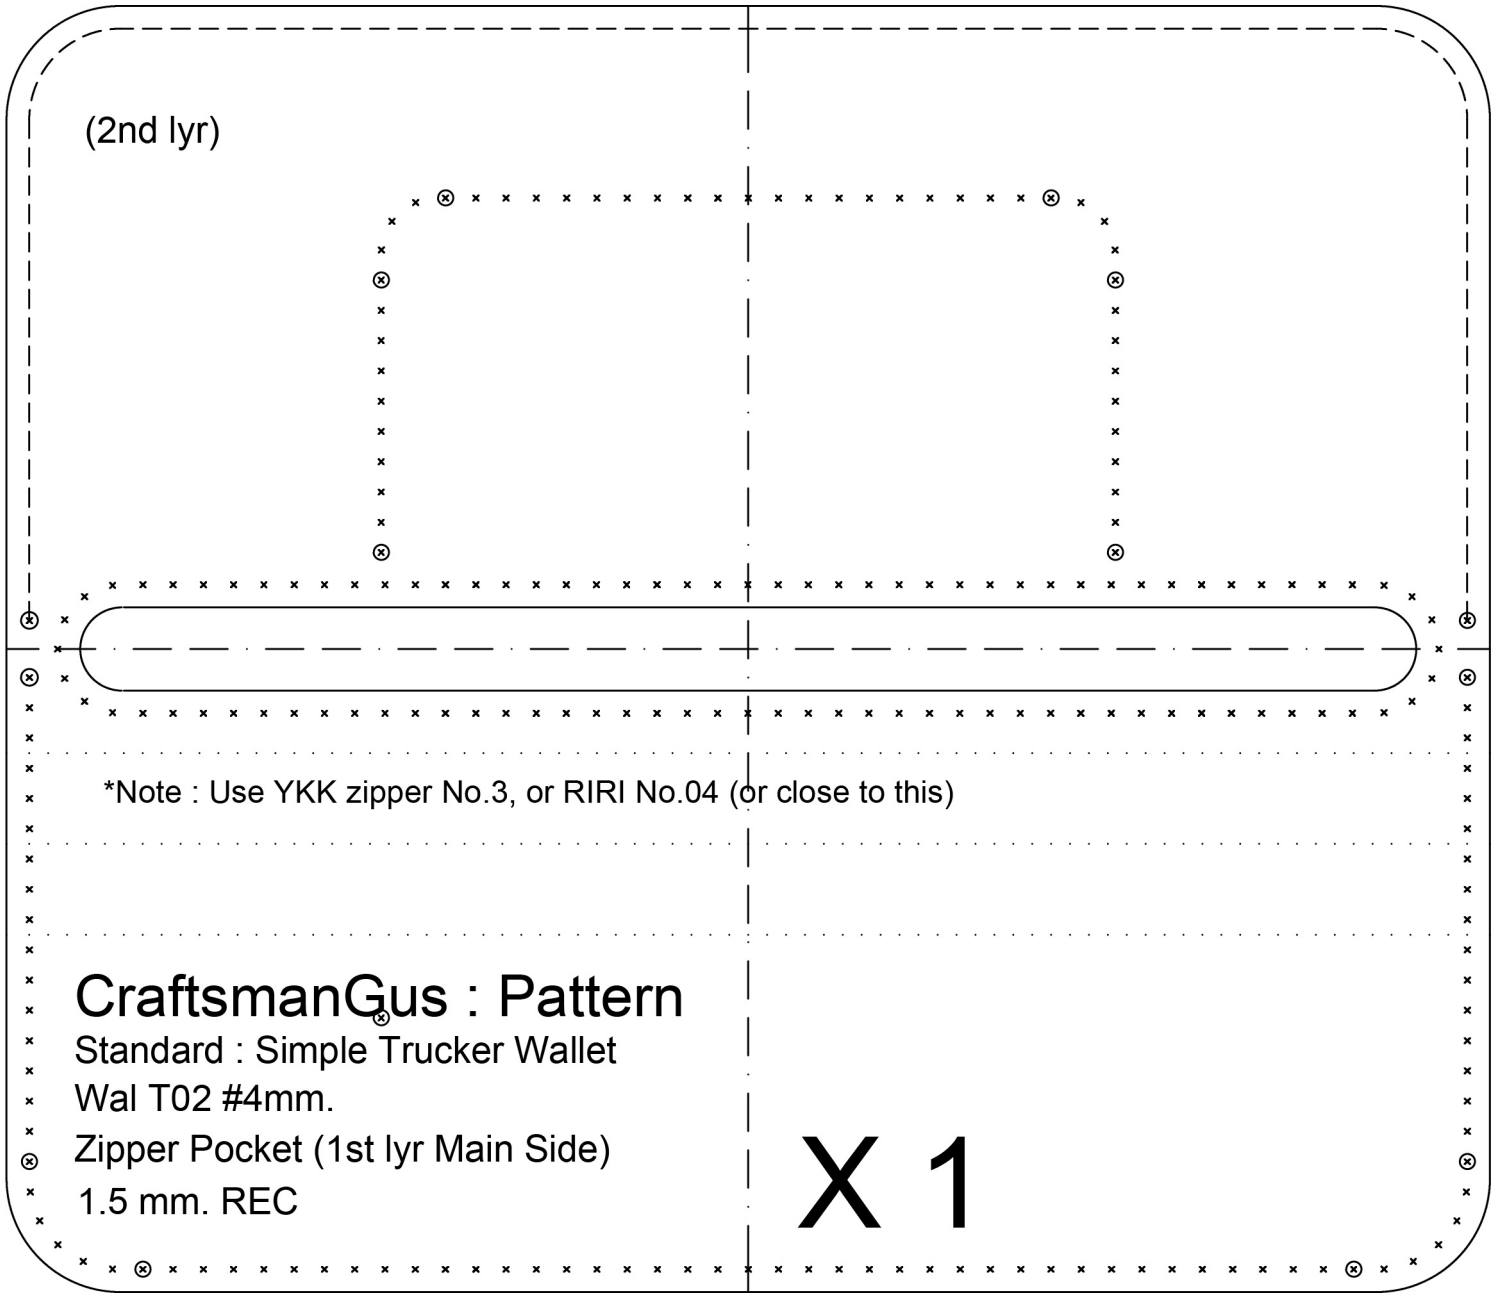
(2nd lyr)
*Note : Use YKK zipper No.3, or RIRI No.04 (or close to this)
CraftsmanGus : Pattern
Standard : Simple Trucker Wallet
Wal T02 #4mm.
Zipper Pocket (1st lyr Main Side)
1.5 mm. REC
X 1

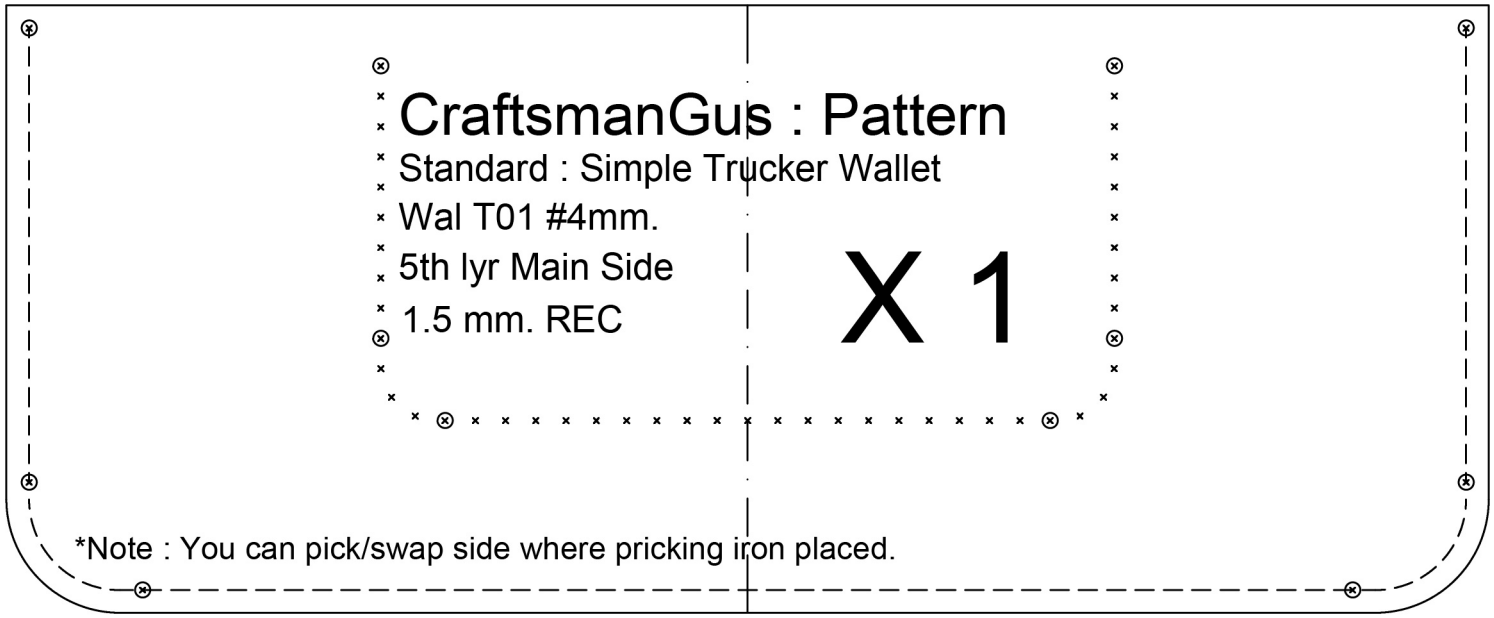
CraftsmanGus : Pattern
Standard : Simple Trucker Wallet
Wal T01 #4mm.
5th lyr Main Side
1.5 mm. REC
X 1
*Note : You can pick/swap side where pricking iron placed.

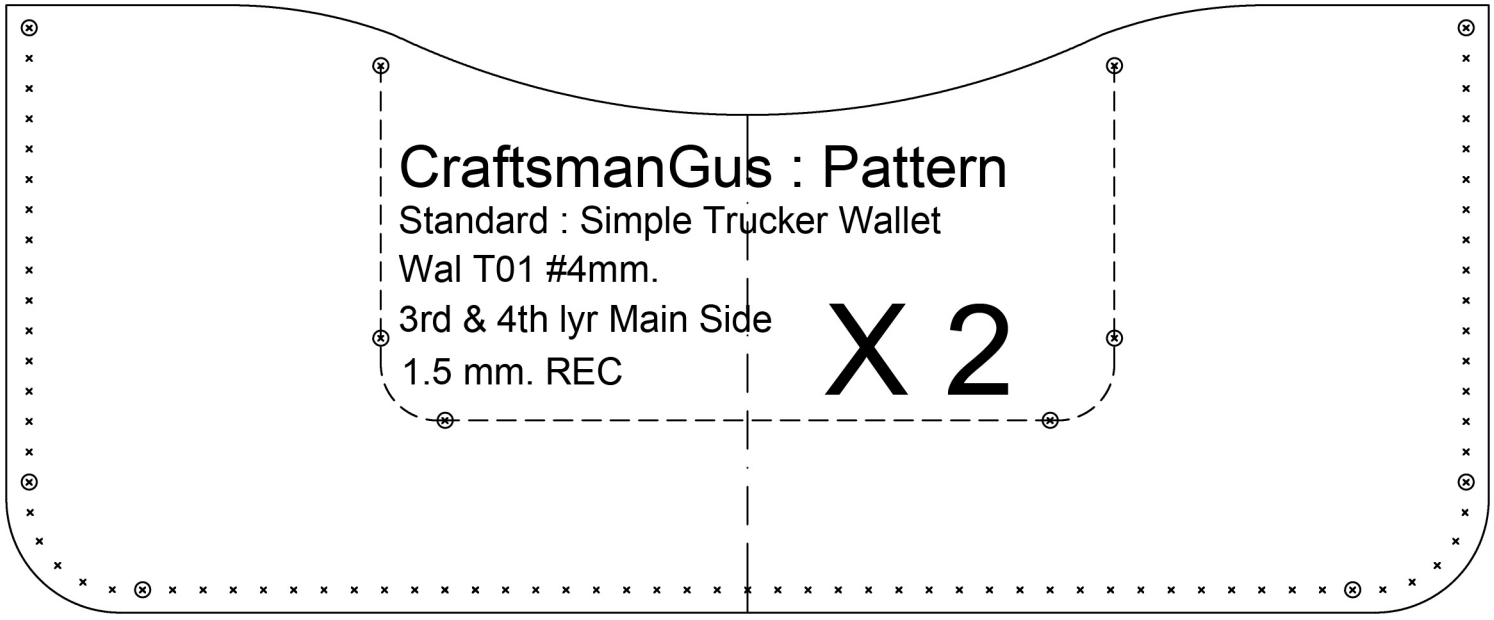
CraftsmanGus : Pattern
Standard : Simple Trucker Wallet
Wal T01 #4mm.
3rd & 4th lyr Main Side
1.5 mm. REC
X 2

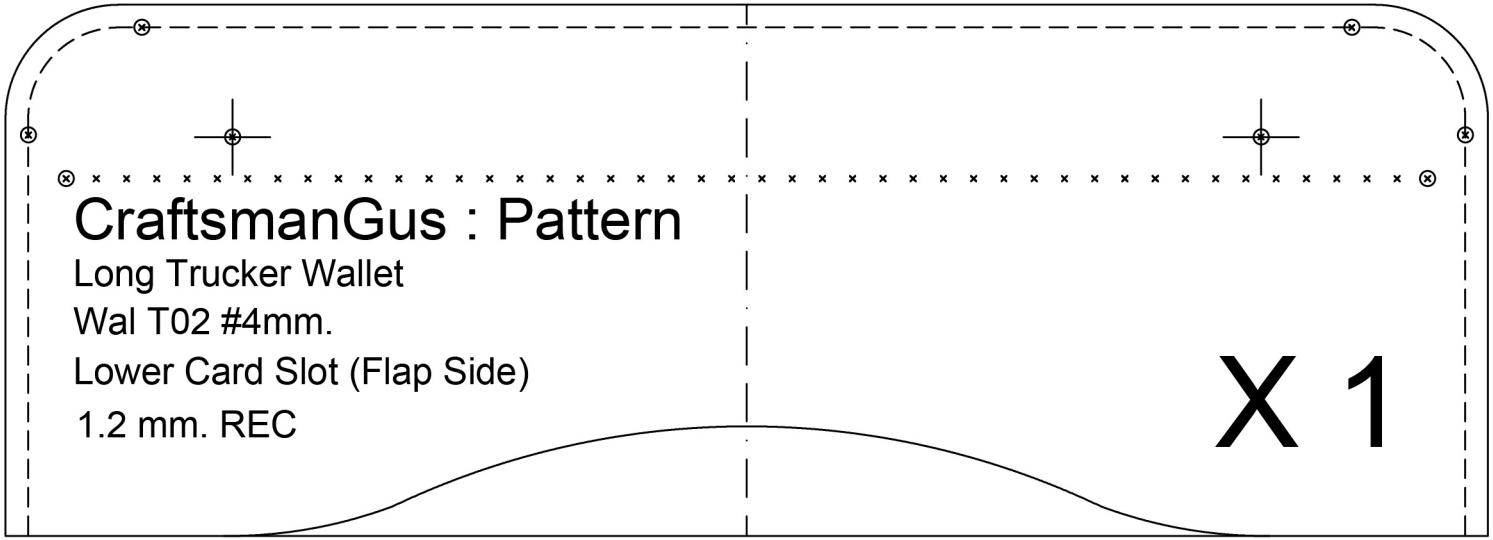
CraftsmanGus : Pattern
Long Trucker Wallet
Wal T02 #4mm.
Lower Card Slot (Flap Side)
1.2 mm. REC
X 1

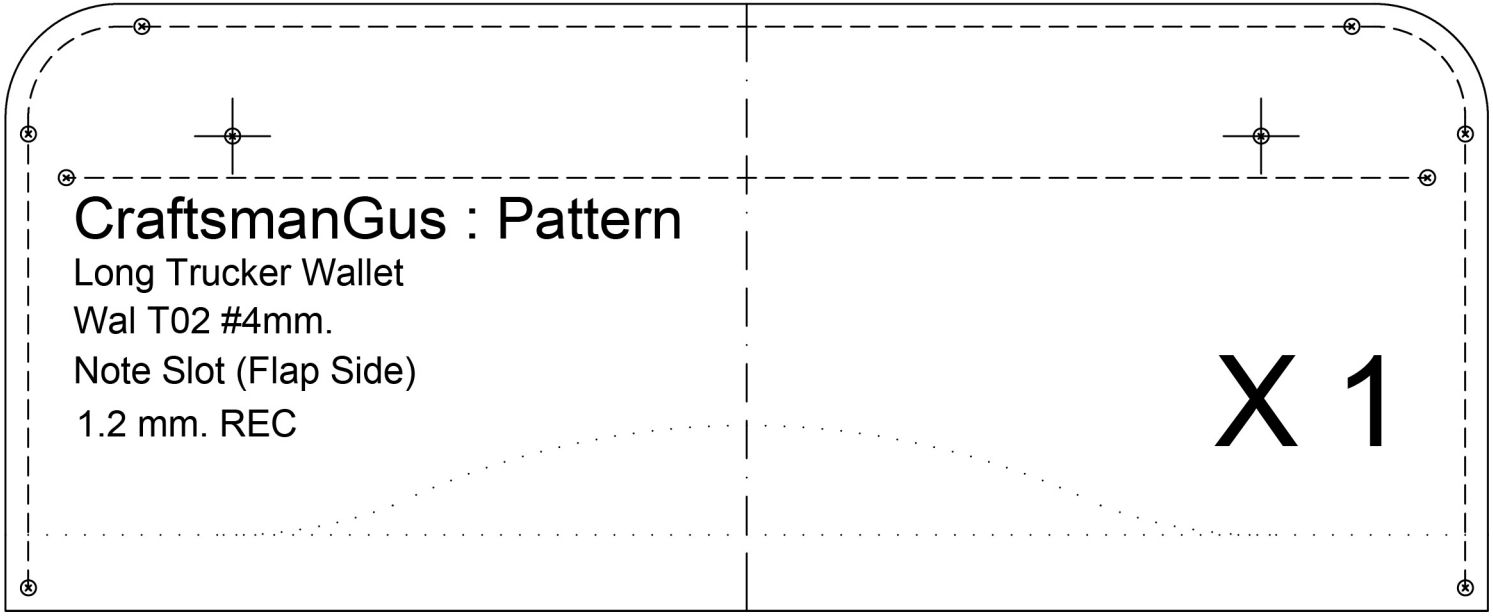
CraftsmanGus : Pattern
Long Trucker Wallet
Wal T02 #4mm.
Note Slot (Flap Side)
1.2 mm. REC
X 1

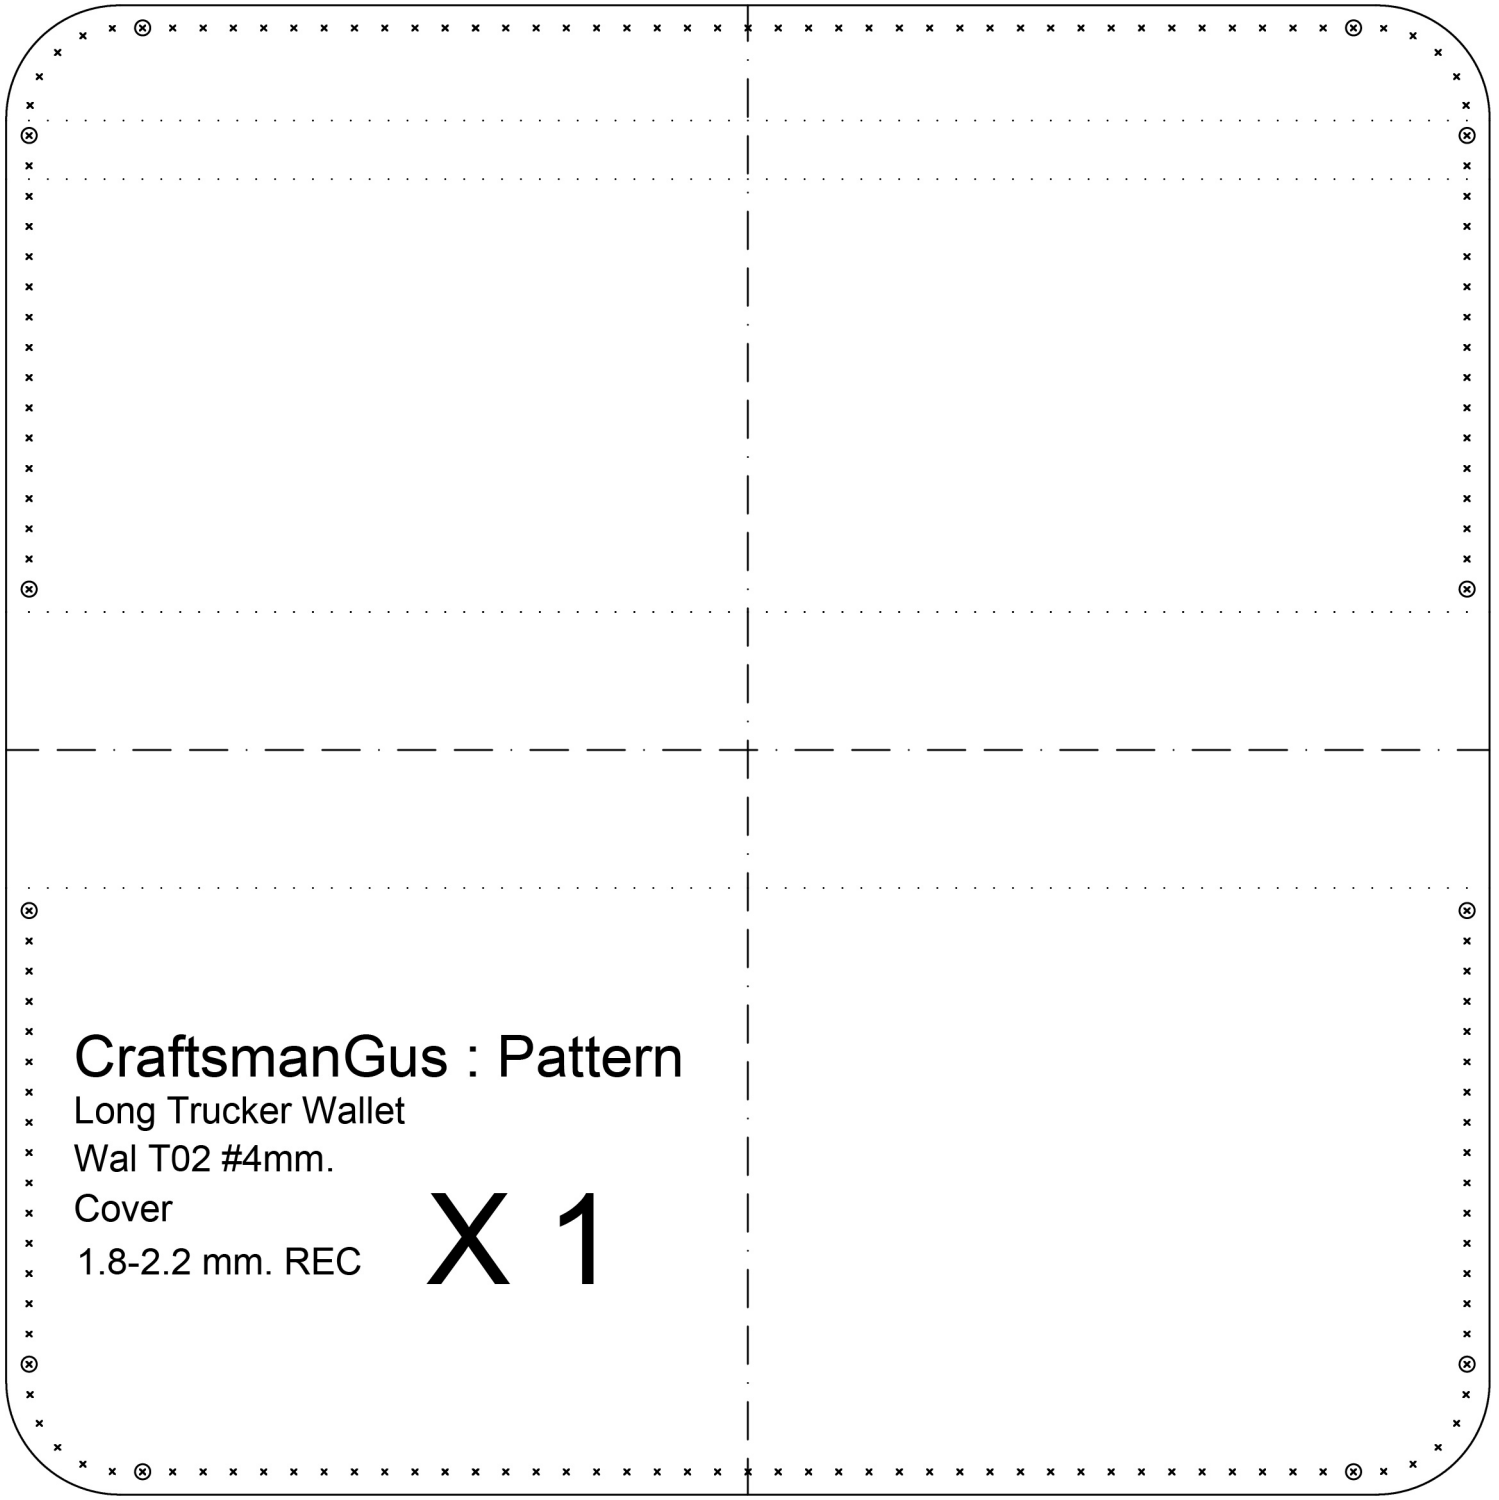
CraftsmanGus : Pattern
Long Trucker Wallet
Wal T02 #4mm.
Cover
1.8-2.2 mm. REC
X 1